

OPERATOR'S MANUAL

INCLUDING: OPERATION, INSTRUCTION, INSTALLATION, MAINTENANCE AND PARTSBOOK


**IMPORTANT: READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR
SERVICING THIS TOOL.**

SUPER SPEED MULTI- PURPOSE BREAKING SAW

TOOL DATA


 

 
 

 

 


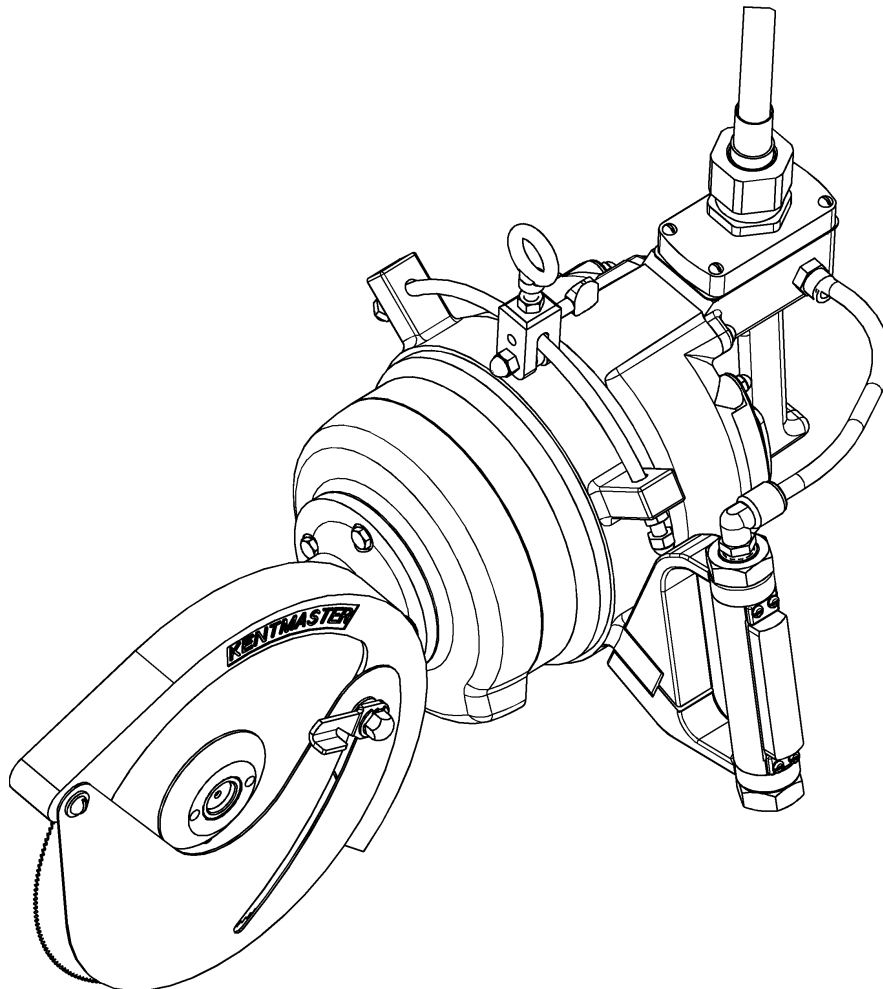


 
MODEL: SUPER SPEED
ASSEMBLY NO.: 1000200
TYPE: ELECTRICAL OPERATED
2HP MOTOR

NET WEIGHT: 46 lbs (21 kg)
360° Rotation for Cutting at All Angles
Powerful Cutting Action
Easy to Clean and Sanitize



- = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.
- = Hazards or unsafe practices which could result in minor personal injury, product or property damage.
- = Important installation, operation or maintenance information.

OPERATING AND SAFETY INSTRUCTIONS

-  **WARNING** DO NOT OPERATE THIS TOOL UNTIL YOU HAVE READ AND UNDERSTOOD THE SAFETY INSTRUCTIONS AND OPERATING MANUALS.
-  **WARNING** DO NOT OPERATE THIS TOOL UNTIL YOU HAVE RECEIVED TRAINING IN THE HANDLING, OPERATION AND USE OF THIS TOOL.
-  **WARNING** STOP USING A MALFUNCTIONING OR DEFECTIVE TOOL IMMEDIATELY. REPORT ANY PROBLEMS OR DEFECTS TO YOUR SUPERVISOR FOR REMOVAL OF THE TOOL FROM SERVICE.
-  **WARNING** DO NOT ATTEMPT TO REPAIR THE TOOL YOURSELF.
-  **WARNING** DO NOT ALLOW UNAUTHORIZED PERSONS TO USE TOOL.
-  **WARNING** REMOVE AND DISCONNECT POWER FROM THE TOOL WHEN TOOL IS LEFT UNATTENDED OR IS NOT IN USE.
-  **WARNING** NEVER TIE DOWN, BYPASS, ALTER OR MODIFY THE ACTIVATING SWITCHES OR TRIGGERS OF THIS TOOL.
-  **WARNING** NEVER MAKE ALTERATIONS OR MODIFICATIONS TO THIS TOOL.
-  **WARNING** BE CONSTANTLY AWARE AND ALERT FOR UNSAFE CONDITIONS AND REPORT THEM IMMEDIATELY TO YOUR SUPERVISOR.
-  **WARNING** NEVER PLACE YOUR HAND OR ANY PART OF YOUR BODY IN THE CUTTING PATH OF THE TOOL.
-  **WARNING** NEVER ALLOW ANYONE ELSE TO PLACE THEIR HANDS OR ANY PART OF THEIR BODY IN THE CUTTING PATH OF THE TOOL.
-  **WARNING** DO NOT ACTIVATE CONTROL SWITCHES OR TRIGGERS OF THIS TOOL UNLESS YOU INTEND TO TEST OR OPERATE THIS TOOL.
-  **WARNING** DO NOT USE THIS TOOL FOR ANY PURPOSE OTHER THAN IT'S INTENDED PURPOSE.
-  **CAUTION** WHEN OPERATING THIS TOOL WEAR THE PROTECTIVE GEAR AND SAFETY EQUIPMENT SUPPLIED TO YOU.
-  **WARNING** THE NOISE EMISSION (SOUND PRESSURE LEVEL) AT THE WORKSTATION MAY EXCEED 80 dB (A). EAR AND SOUND PROTECTION GEAR IS REQUIRED.

KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE., MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA

☎ TELEPHONE: (818) 359-8888 FAX: (818) 303-5151

INSTALLATION INSTRUCTIONS

ALL ELECTRICAL WIRING MUST BE DONE BY A LICENSED ELECTRICIAN IN ACCORDANCE WITH THE NATIONAL, STATE AND LOCAL ELECTRICAL CODES. (REFER TO NAMEPLATE ON TOOL FOR PROPER POWER CONFIGURATION).

1. A BALANCER IS REQUIRED FOR OPERATION AND USE OF THIS TOOL. WEIGHT OF TOOL MUST FALL WITHIN WEIGHT RANGE OF BALANCER.
2. INSTALL BALANCER ABOVE WORK AREA. BALANCER MUST HAVE SUFFICIENT VERTICAL TRAVEL SO OPERATOR CAN REACH ENTIRE WORK AREA WITH TOOL WITHOUT STRAIN.
3. ADJUST BALANCER ACCORDING TO THE OPERATOR'S PREFERENCE AND COMFORT.
4. TOOL REQUIRES GREASING AFTER EVERY 40 HOURS OF OPERATION. GREASE USING KENTMASTER GREASE (PART NO. 7903030 FOR BEARINGS AND 7903090 FOR GEARS).

OPERATING INSTRUCTIONS

ONLY TRAINED PERSONNEL ARE TO OPERATE THIS TOOL.

1. TO HELP ENSURE TOOL IS OPERATING PROPERLY, PERFORM FOLLOWING STEPS AT START OF EACH SHIFT:
 - MAKE SURE TOOL MOVES UP AND DOWN FREELY WHILE HANGING FROM BALANCER OVERHEAD.
 - WITH POWER TO TOOL TURNED ON, TEST TRIGGER FOR PROPER OPERATION.
 - DEPRESS EACH TRIGGER SEPARATELY. TOOL SHOULD NOT ACTIVATE. DEPRESS BOTH TRIGGERS. TOOL SHOULD ACTIVATE.
 - IF TOOL HAS "ANTI-TIE DOWN" OPTION, BOTH TRIGGERS MUST BE DEPRESSED SIMULTANEOUSLY FOR TOOL TO ACTIVATE.
2. HOLD TOOL FIRMLY IN HAND WITH TRIGGER LEVERS IN POSITION TO BE ACTIVATED BY FINGERS.
3. SQUEEZE TRIGGERS TO ACTIVATE TOOL, RELEASE TRIGGERS TO DEACTIVATE TOOL.
4. POSITION TOOL AND PERFORM CUTTING OPERATION.
5. DO NOT LAY TOOL DOWN WHEN TOOL IS NOT BEING USED

MAINTENANCE

ONLY TRAINED AND QUALIFIED PERSONNEL ARE TO PERFORM MAINTENANCE AND SERVICE TO THIS TOOL.

1. TOOL REQUIRES GREASING AFTER EVERY 40 HOURS OF OPERATION. GREASE USING KENTMASTER GREASE (PART NO. 7903030 FOR BEARINGS AND 7903090 FOR GEARS)

BLADE REMOVAL AND CLEANING

ALWAYS DISCONNECT POWER SUPPLY FROM TOOL BEFORE INSTALLING OR REMOVING BLADES FROM TOOL.

1. REMOVE BLADE NUT (PART NO. 6003180, FIG. NO. 9 AND 10) USING WRENCH (4501610)
2. REMOVE BLADE.
3. SHARPEN BLADES WHEN NECESSARY.
5. REASSEMBLE ALL PARTS IN REVERSE ORDER.

SERVICE

1. KEEP GOOD RECORDS OF ALL SERVICE ACTIVITY AND INCLUDE TOOL IN YOUR PREVENTIVE MAINTENANCE PROGRAM.
2. USE ONLY GENUINE KENTMASTER REPLACEMENT PARTS TO ASSURE PROPER PERFORMANCE OF TOOL.
3. CONTACT THE KENTMASTER SUPPLIER NEAREST YOU FOR PARTS AND CUSTOMER SERVICE INFORMATION.

VIBRATION DATA

Model	Measuring device	Average total vibration Aeq (m/s ²)		Gain (dB)
		Rear Handle	Front Handle	
SUUPER SPEED	VHM-100	2.06	1.63	20 / 40 / 40



PARTS BOOK

SUPER SPEED – MAIN ASSEMBLY

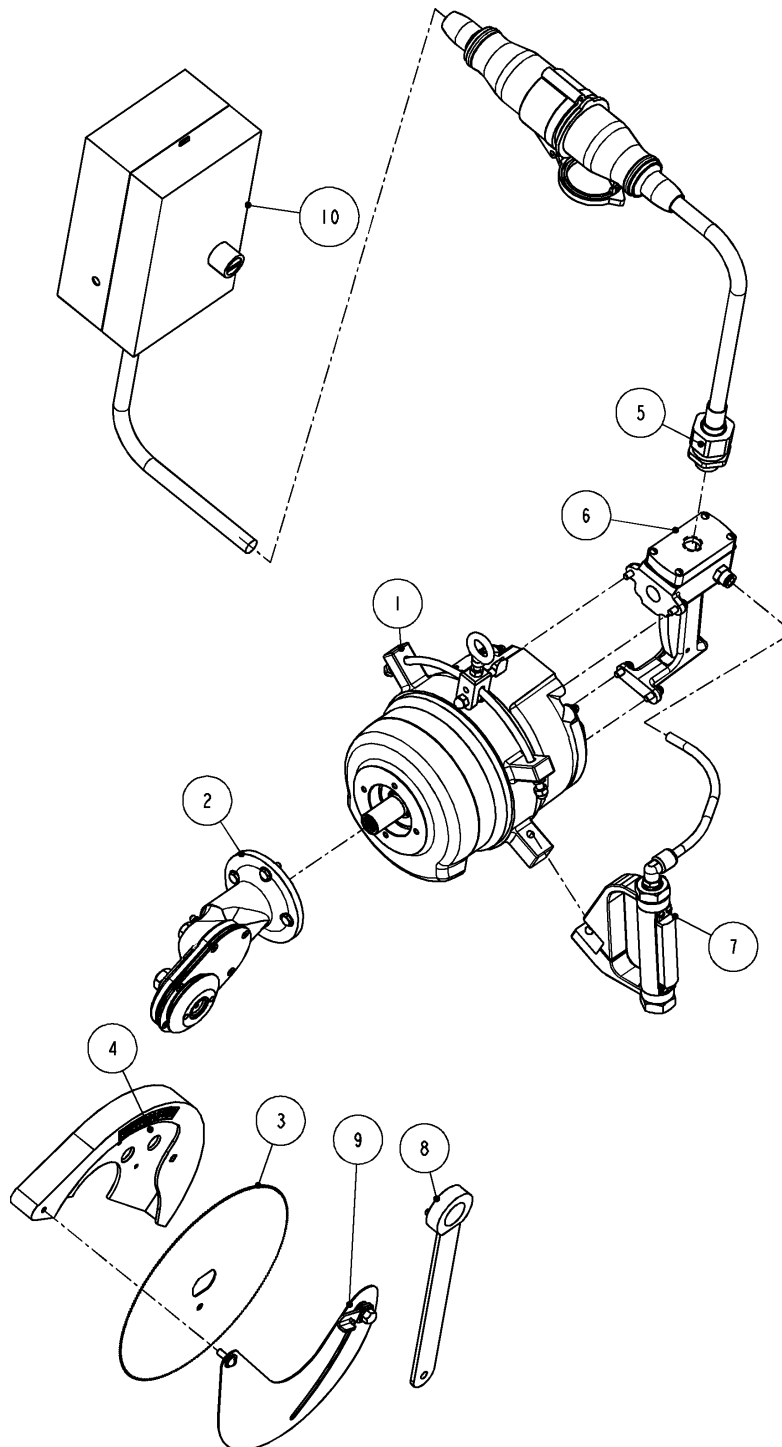


Figure 1 1000200: SUPER SPEED - MAIN ASSEMBLY


KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE., MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA

☎ TELEPHONE: (818) 359-8888 FAX: (818) 303-5151

1000200: SUPER SPEED			
ITEM	PART #	DESCRIPTION	QTY
1	OPTIONS	2HP MOTOR ASSEMBLY	1
2	1001540	NOSE GEAR ASSEMBLY, 8", 9" & 10"	1
	1001760	NOSE GEAR ASSEMBLY, 11" & 12"	1
3	4000230	8" SAW BLADE(150 TEETH)	1
	4000110	9" THIN RIM SAW BLADE (240 TEETH)	1
	4000060	10" SAW BLADE (220 TEETH)	1
	4000280	10" SAW BLADE (120 TEETH)	1
	4000080	11" SAW BLADE (240 TEETH)	1
	4000520	12" SAW BLADE (240 TEETH)	1
4	6003250	GUARD FOR 8" BLADE	1
	1000280	GURAD FOR 9" & 10" BLADE	1
	6001890	GUARD FOR 11" & 12" BLADE	1
5	1002420	POWER SUPPLY, NON 42V MOTOR OPTIONS	1
	1002430	POWER SUPPLY, 42V MOTOR OPTIONS	1
	1002425	POWER SUPPLY,NON 42V, ANTI-TIE DOWN	1
6	1001560	REAR HANDLE ASSEMBLY	1
7	1003900	FRONT HANDLE ASSEMBLY	1
8	4501610	WRENCH / TOOL	1
9	6001190	DEPTH GAUGE FOR 9" & 10" BLADE	1
	6001191	DEPTH GAUGE FOR 8" BLADE	1
10	OPTIONS	MAGNETIC STARTER BOX	1


Figure 2 SUPER SPEED - BOM

MOTOR ASSEMBLY

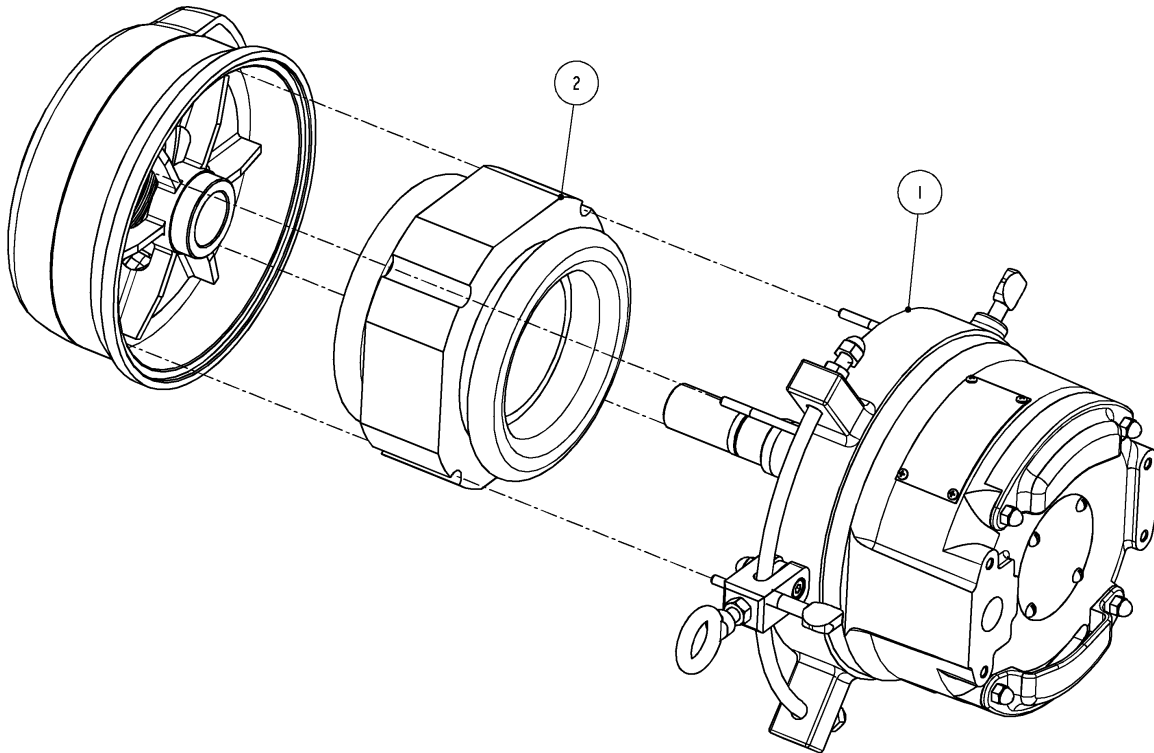


MOTOR ASSEMBLY 2HP, 550V, 3PH, 60HZ, 2.2 AMPS	1002850	2340450	1002801
MOTOR ASSEMBLY 2HP, 380V, 3PH, 60HZ, 2.8 AMPS	1002840-380-360	2340440	1002801
MOTOR ASSEMBLY 2HP, 220V, 3PH, 60HZ, 4.8 AMPS	1002840-220-360	2340440	1002801
MOTOR ASSEMBLY 2HP, 460V, 3PH, 60HZ, 2.2 AMPS	1002830-460-360	2340430	1002801
MOTOR ASSEMBLY 2HP, 230V, 3PH, 60HZ, 4.4 AMPS	1002830-230-360	2340430	1002801
MOTOR ASSEMBLY 2HP, 380V, 3PH, 50HZ, 3.1 AMPS	1002820-380-350	2340420	1002801
MOTOR ASSEMBLY 2HP, 220V, 3PH, 50HZ, 5.4 AMPS	1002820-220-350	2340420	1002801
MOTOR ASSEMBLY 2HP, 230V, 3PH, 50HZ, 5.0 AMPS	1002810-230-350	2340410	1002801
MOTOR ASSEMBLY 2HP, 115V, 3PH, 50HZ, 10.0 AMPS	1002810-115-350	2340410	1002801
MOTOR ASSEMBLY 2HP, 42V, 3PH, 50HZ, 30 AMPS	1002800	2340400	1002801
MOTOR OPTION DESCRIPTION	MOTOR ASSEMBLY	#2 STATOR	#1 MOTOR w/o STATOR
MOTOR ASSEMBLY FOR 8", 9" & 10" BLADE			

Figure 3 MOTOR ASSEMBLY w/STATOR for 8", 9" & 10" BLADES

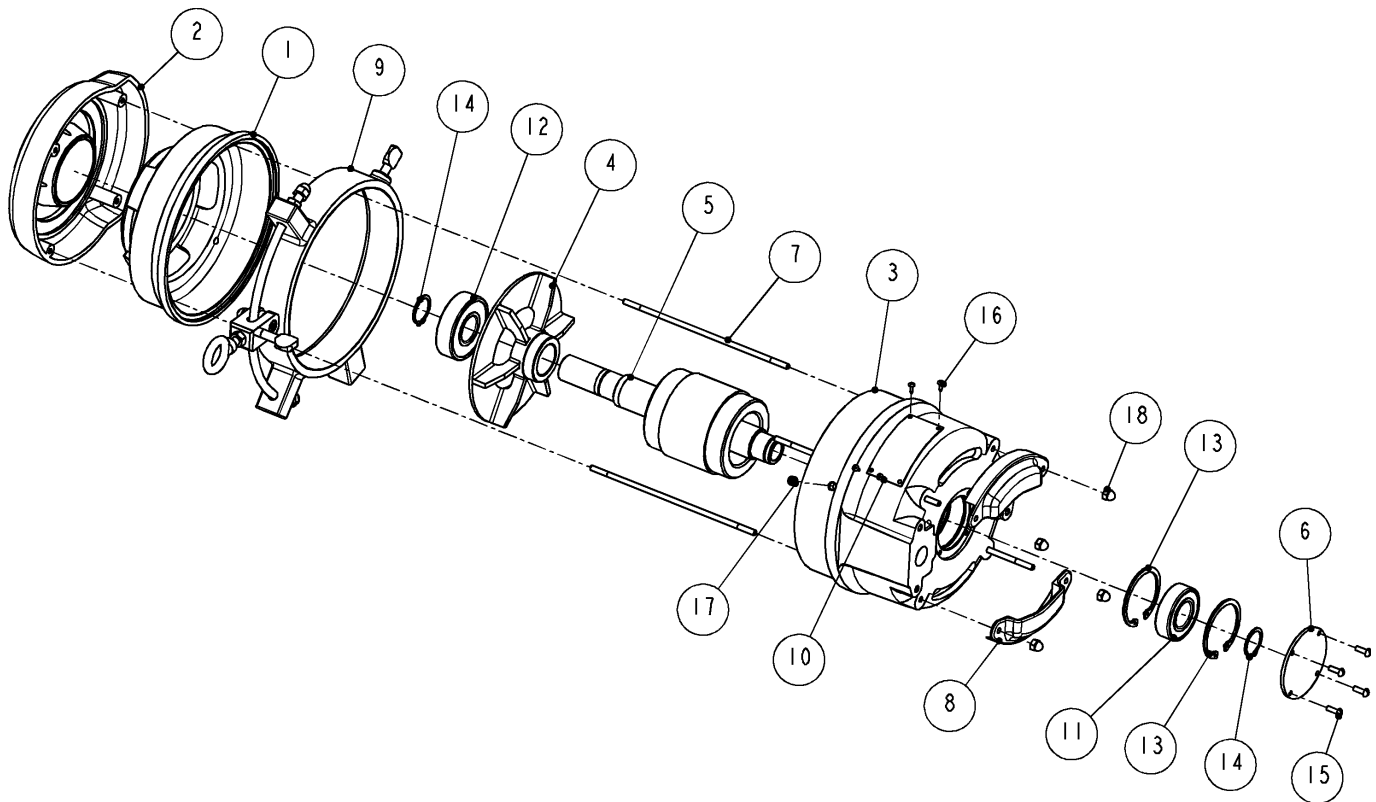


1002801: MOTOR w/o STATOR (8", 9" & 10" BLADE)			
ITEM	PART #	DESCRIPTION	QTY
1	1000220	HOUSING - FAN	1
2	1000230	FRONT END BELL	1
3	1002720	END BELL	1
4	1000270	FAN	1
5	1002710	ROTOR AND SHAFT ASSEMBLY	1
6	1000390	COVER END BELL	1
7	1000460	TIE ROD	4
8	1000480	DEFLECTOR - AIR	2
9	1003700	YOKE ASSEMBLY	1
10	2000040	NAME PLATE	1
11	3204050	BEARING	1
12	3304050	BEARING	1
13	5002060	RETAINING RING	2
14	5100980	RETAINING RING	2
15	8028040	SCREW	4
16	8081020	SCREW	4
17	8313020	SET SCREW	1
18	8501090	NUT	4

Figure 4 1002801: MOTOR w/o STATOR (8", 9" & 10" BLADE)

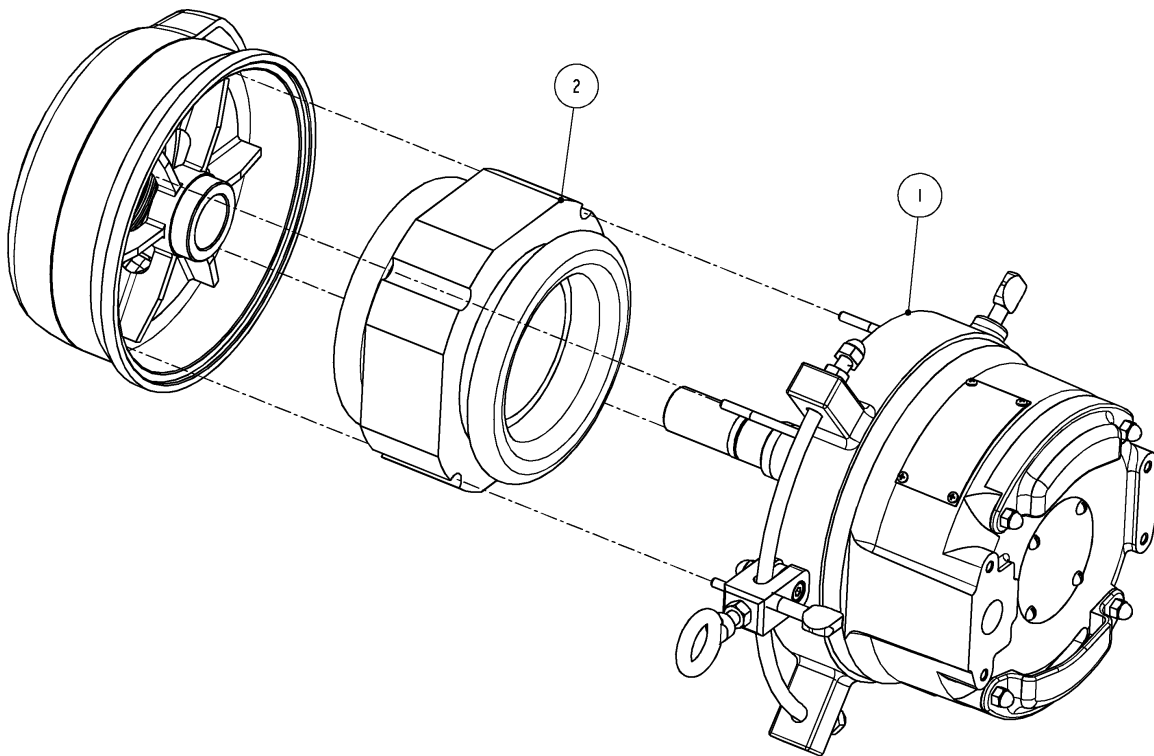

MOTOR ASSEMBLY 2HP, 550V, 3PH, 60HZ, 2.2 AMPS	1002950	2340450	1002901
MOTOR ASSEMBLY 2HP, 380V, 3PH, 60HZ, 2.8 AMPS	1002940-380-360	2340440	1002901
MOTOR ASSEMBLY 2HP, 220V, 3PH, 60HZ, 4.8 AMPS	1002940-220-360	2340440	1002901
MOTOR ASSEMBLY 2HP, 460V, 3PH, 60HZ, 2.2 AMPS	1002930-460-360	2340430	1002901
MOTOR ASSEMBLY 2HP, 230V, 3PH, 60HZ, 4.4 AMPS	1002930-230-360	2340430	1002901
MOTOR ASSEMBLY 2HP, 380V, 3PH, 50HZ, 3.1 AMPS	1002920-380-350	2340420	1002901
MOTOR ASSEMBLY 2HP, 220V, 3PH, 50HZ, 5.4 AMPS	1002920-220-350	2340420	1002901
MOTOR ASSEMBLY 2HP, 230V, 3PH, 50HZ, 5.0 AMPS	1002910-230-350	2340410	1002901
MOTOR ASSEMBLY 2HP, 115V, 3PH, 50HZ, 10.0 AMPS	1002910-115-350	2340410	1002901
MOTOR ASSEMBLY 2HP, 42V, 3PH, 50HZ, 30 AMPS	1002900	2340400	1002901
MOTOR OPTION DESCRIPTION	MOTOR ASSEMBLY	#2 STATOR	#1 MOTOR w/o STATOR
MOTOR ASSEMBLY FOR 11" & 12" BLADE			

Figure 5 MOTOR ASSEMBLY w/STATOR for 11 & 12" BLADES

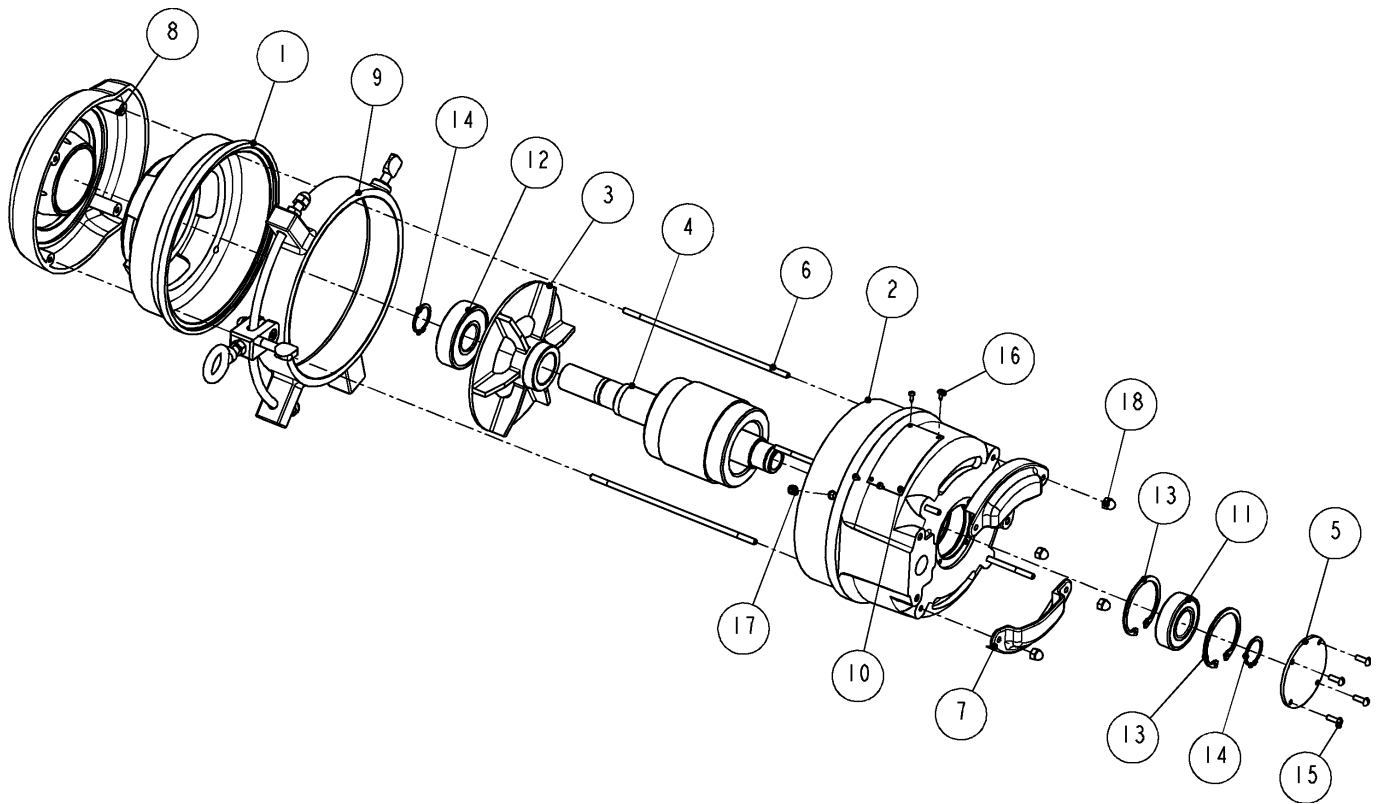

1002901: MOTOR w/o STATOR (11" & 12" BLADES)			
ITEM	PART #	DESCRIPTION	QTY
1	1000220	HOUSING - FAN	1
2	1002720	END BELL	1
3	1000270	FAN	1
4	1002710	ROTOR AND SHAFT ASSEMBLY	1
5	1000390	COVER END BELL	1
6	1000460	TIE ROD	4
7	1000480	DEFLECTOR - AIR	2
8	1000760	FRONT END BELL	1
9	1003700	YOKE ASSEMBLY	1
10	2000040	NAME PLATE	1
11	3204050	BEARING	1
12	3304050	BEARING	1
13	5002060	RETAINING RING	2
14	5100980	RETAINING RING	2
15	8028040	SCREW	4
16	8081020	SCREW	4
17	8313020	SET SCREW	1
18	8501090	NUT	4

Figure 6 1002901: MOTOR w/o STATOR (11" & 12" BLADES)

1003700: YOKE ASSEMBLY			
ITEM	PART #	DESCRIPTION	QTY
1	1003810	HANGER YOKE	1
2	1003820	ROD - HANGER	1
3	1003830	ASSEMBLY CARRIER	1
4	3850010	NYLON BEARING STRIP	1
5	8443080	SCREW	1
6	8500130	NUT	2
7	8501130	NUT	2
8	8703020	PLUG	1


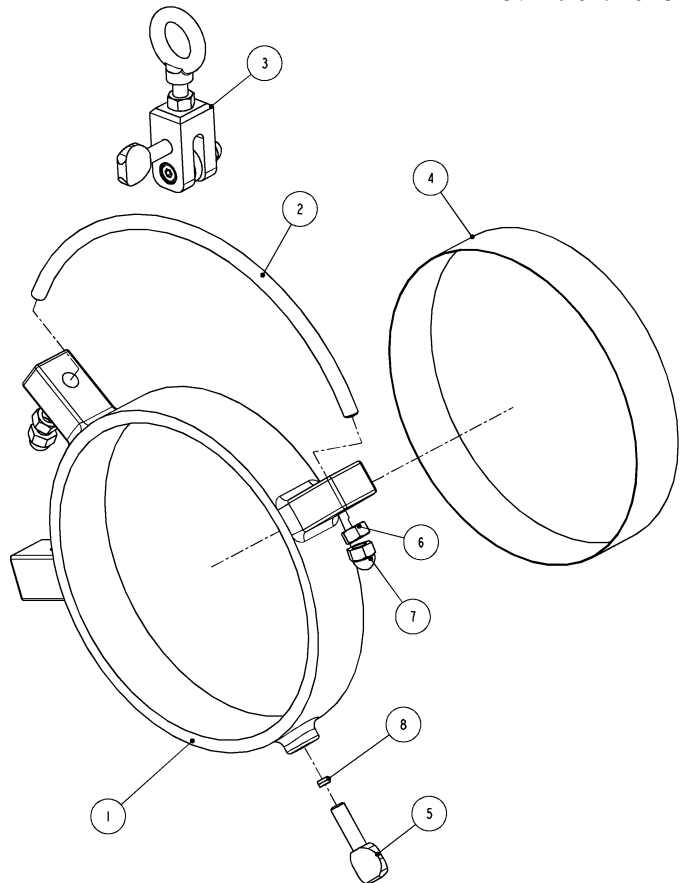


Figure 7 1003700: YOKE ASSEMBLY

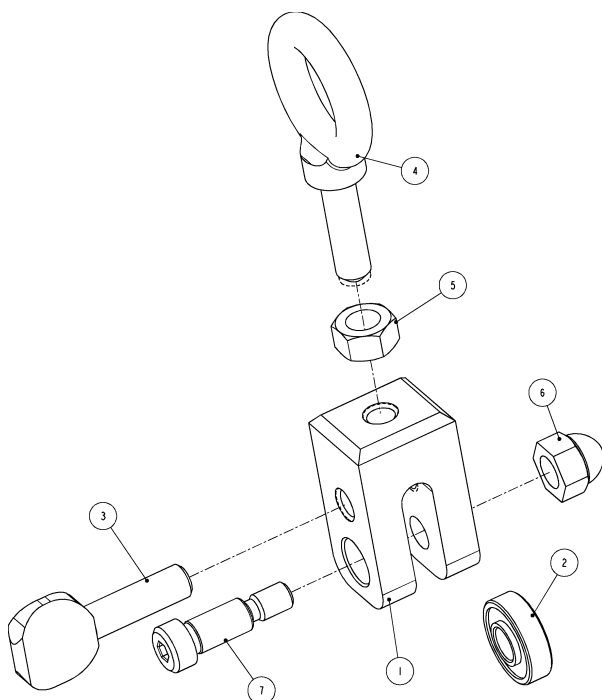


1003830: CARRIER ASSEMBLY			
ITEM	PART #	DESCRIPTION	QTY
1	1003860	CARRIER - BEARING	1
2	3601150	BEARING	1
3	8443080	SCREW	1
4	8463070	SHOULDER EYE BOLT	1
5	8500130	NUT	1
6	8501130	NUT	1
7	8870220	SCREW	1

Figure 8 1003830: CARRIER ASSEMBLY

NOSE GEAR ASSEMBLY

NOSE GEAR ASSEMBLY FOR 8", 9" & 10" BLADE

1001540: NOSE GEAR ASSEMBLY (8", 9" & 10" BLADE)

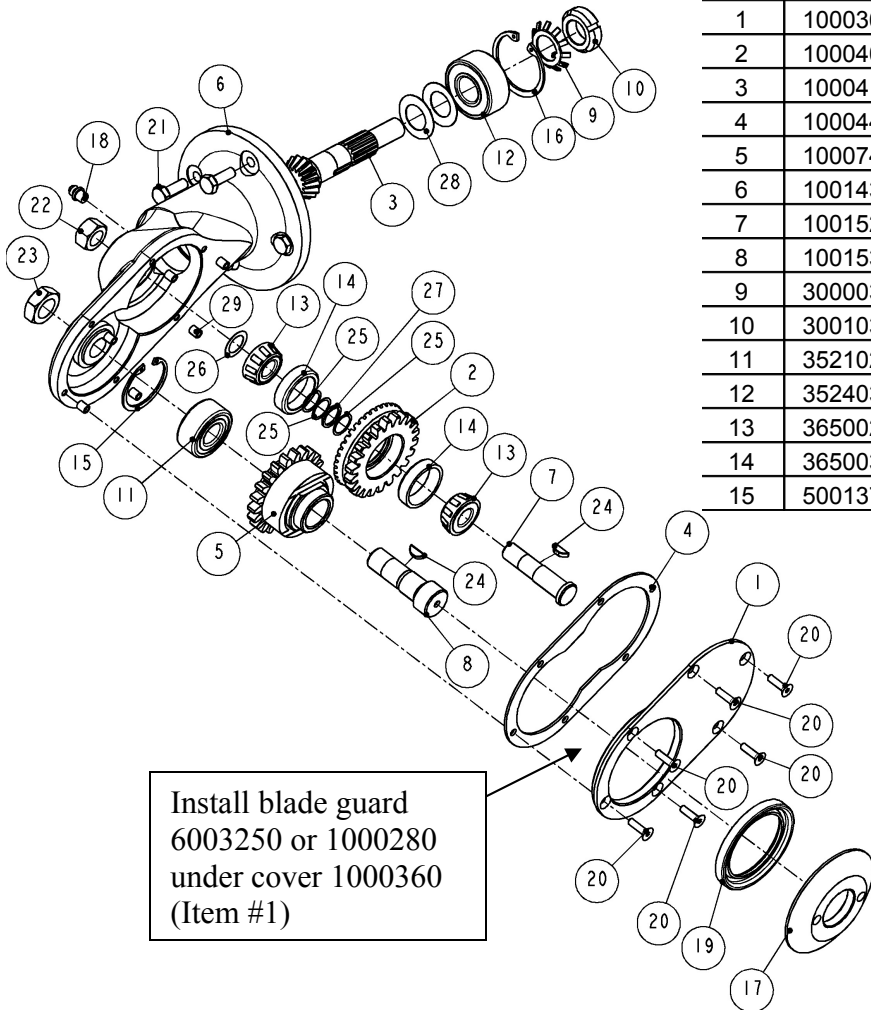

ITEM	PART #	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
1	1000360	COVER GEAR NOSE	1	16	5001560	RETAINING RING	1
2	1000400	BEVEL/SPUR GEAR	1	17	6003180	NUT - BLADE	1
3	1000410	PINION	1	18	7017110	GREASE FITTING	1
4	1000440	GASKET	1	19	7885580	SEAL	1
5	1000740	DRIVEN SPUR GEAR	1	20	8270530	SCREW	6
6	1001430	GEAR NOSE HOUSING	1	21	8411060	SCREW	4
7	1001520	SHAFT	1	22	8500470	NUT	1
8	1001530	SHAFT	1	23	8500520	NUT	1
9	3000030	LOCKWASHER	1	24	8600440	KEY	2
10	3001030	LOCKNUT	1	25	8705000	WASHER	3
11	3521020	BEARING - DOUBLE ROW	1	26	8705010	WASHER	1
12	3524030	BEARING	1	27	8705470	WASHER	1
13	3650020	BEARING CONE	2	28	8712030	SPRING WASHER	2
14	3650030	BEARING CUP	2	29	8803080	INSERT	6
15	5001370	RETAINING RING	1				

Figure 9 1001540: NOSE GEAR ASSEMBLY FOR 8" 9" & 10" BLADE

NOSE GEAR ASSEMBLY FOR 11" & 12" BLADE

1001760: NOSE GEAR ASSEMBLY (11" & 12" BLADE)							
ITEM	PART #	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
1	1001580	COVER GEAR NOSE	1	16	5001560	RETAINING RING	1
2	1000400	BEVEL/SPUR GEAR	1	17	6003180	NUT - BLADE	1
3	1000410	PINION	1	18	7017110	GREASE FITTING	1
4	1000440	GASKET	2	19	7885580	SEAL	1
5	1000740	DRIVEN SPUR GEAR	1	20	8270530	SCREW	6
6	1001520	SHAFT	1	21	8411060	SCREW	3
7	1001530	SHAFT	1	22	8500470	NUT	1
8	1001750	GEAR NOSE HOUSING	1	23	8500520	NUT	1
9	3000030	LOCKWASHER	1	24	8600440	KEY	2
10	3001030	LOCKNUT	1	25	8705000	WASHER	3
11	3521020	BEARING - DOUBLE ROW	1	26	8705010	WASHER	1
12	3524030	BEARING	1	27	8705470	WASHER	1
13	3650020	BEARING CONE	2	28	8712030	SPRING WASHER	2
14	3650030	BEARING CUP	2	29	8803080	INSERT	6
15	5001370	RETAINING RING	1				


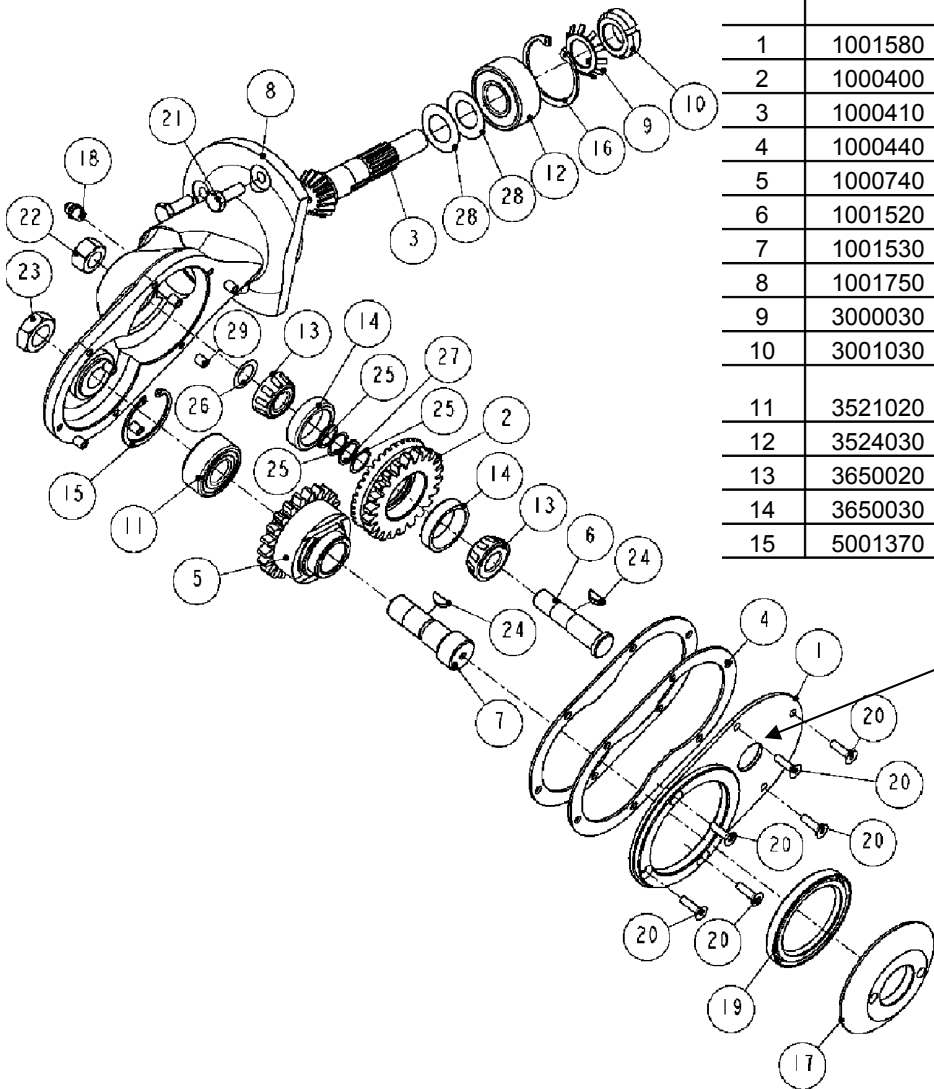


Figure 10 1001760: NOSE GEAR ASSEMBLY FOR 11" & 12" BLADE


BLADE DEPTH GAUGE

DEPTH GAUGE FOR 9" & 10" BLADE

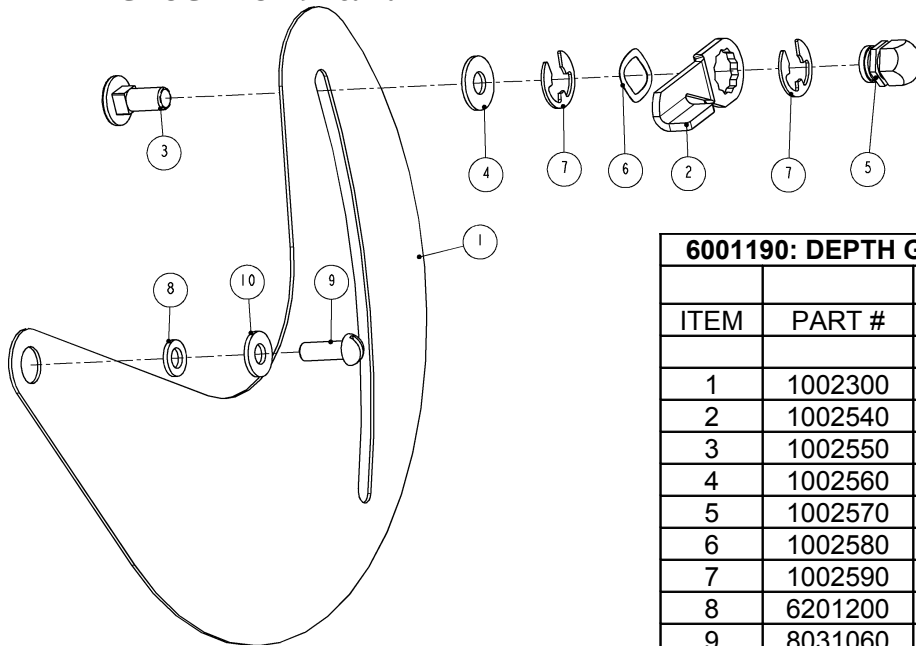

6001190: DEPTH GAUGE FOR 9" & 10" BLADE			
ITEM	PART #	DESCRIPTION	QTY
1	1002300	GAUGE - 10"	1
2	1002540	LEVER	1
3	1002550	BOLT	1
4	1002560	WASHER	1
5	1002570	NUT	1
6	1002580	SPRING LOAD	1
7	1002590	LEVER RETAINER	2
8	6201200	WASHER	1
9	8031060	SCREW	1
10	8505100	WASHER	1


Figure 11 6001190: DEPTH GAUGE FOR 9" & 10" BLADE

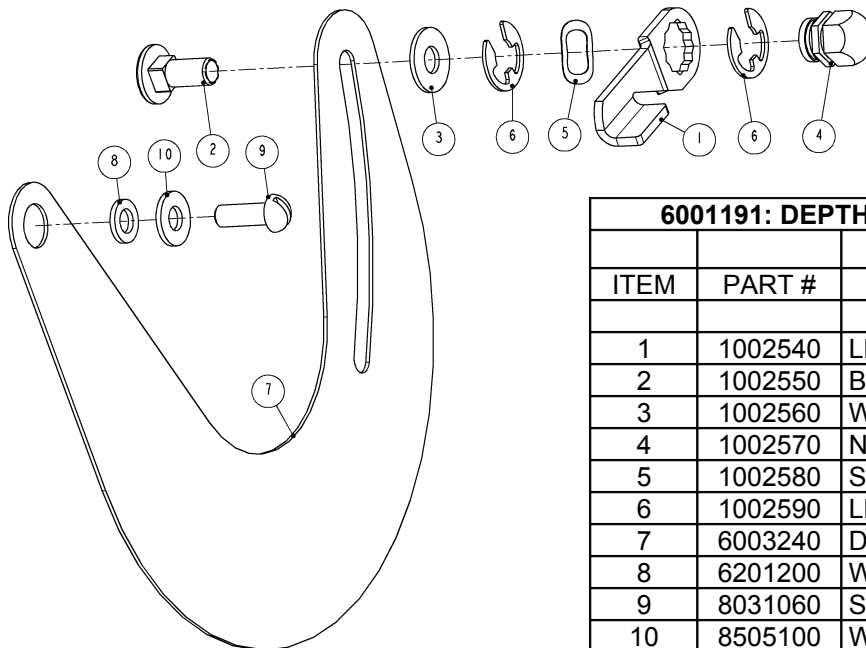

6001191: DEPTH GAUGE FOR 8" BLADE			
ITEM	PART #	DESCRIPTION	QTY
1	1002540	LEVER	1
2	1002550	BOLT	1
3	1002560	WASHER	1
4	1002570	NUT	1
5	1002580	SPRING LOAD	1
6	1002590	LEVER RETAINER	2
7	6003240	DEPTH GAUGE	1
8	6201200	WASHER	1
9	8031060	SCREW	1
10	8505100	WASHER	1


Figure 12 6001191: DEPTH GAUGE FOR 8" BLADE

POWER SUPPLY

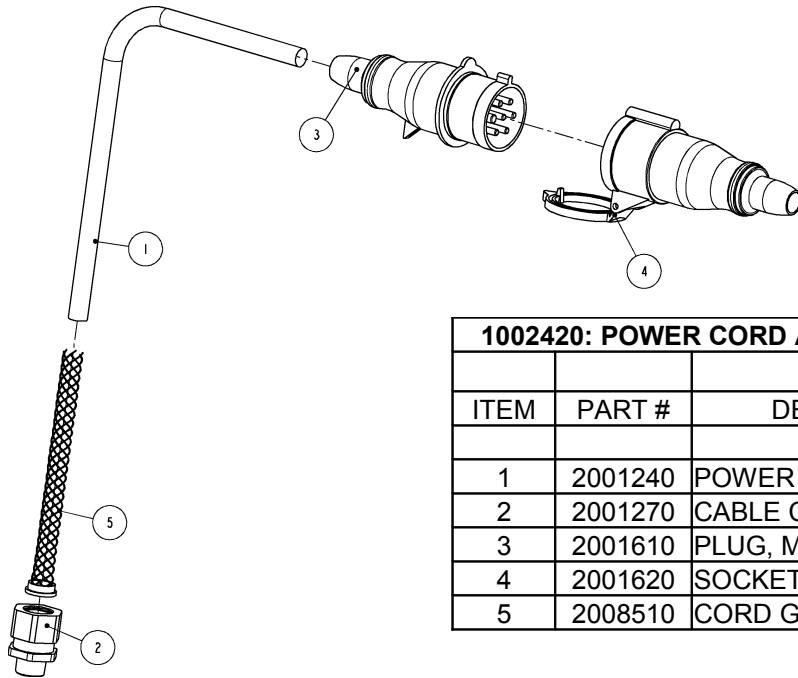


1002420: POWER CORD ASSEMBLY, NON 42V			
ITEM	PART #	DESCRIPTION	QTY
1	2001240	POWER CORD	1
2	2001270	CABLE CONNECTOR	1
3	2001610	PLUG, MALE	1
4	2001620	SOCKET, FEMALE	1
5	2008510	CORD GRIP	1

Figure 13 1002420: POWER CORD ASSEMBLY, NON 42V

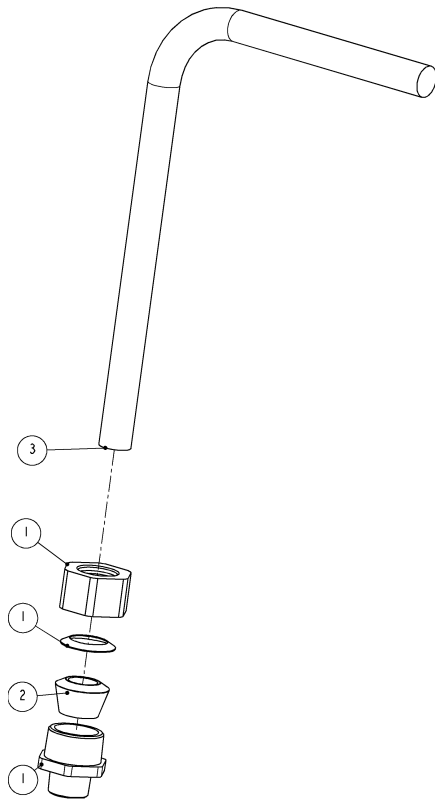

1002430: POWER CORD ASSEMBLY, 42V			
ITEM	PART #	DESCRIPTION	QTY
1	2001270	CABLE CONNECTOR	1
2	2001700	GROMMET	1
3	2007030	POWER CORD	1

Figure 14 1002430: POWER CORD ASSEMBLY, 42V

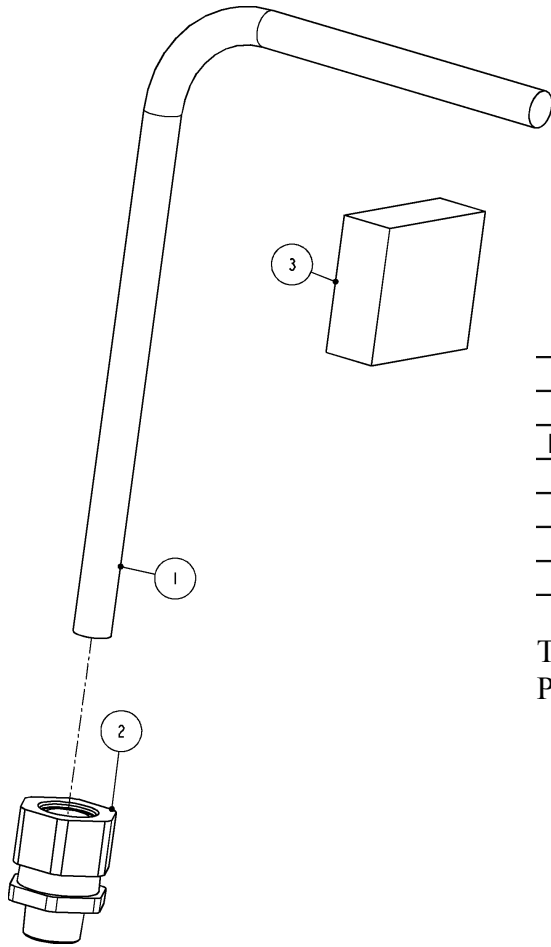

1002425: POWER CORD, NON 42V, w/ATD			
ITEM	PART #	DESCRIPTION	QTY
1	2001080	POWER CORD	1
2	2001270	CABLE CONNECTOR	1
3	2009120	TIMER	1

TIMER (ITEM #3), ANTI – TIE DOWN UNIT, IS PLACED IN MAGNETIC STARTER BOX.

Figure 15 1002425: POWER CORD, NON 42V, w/ATD

WIRING DIAGRAM


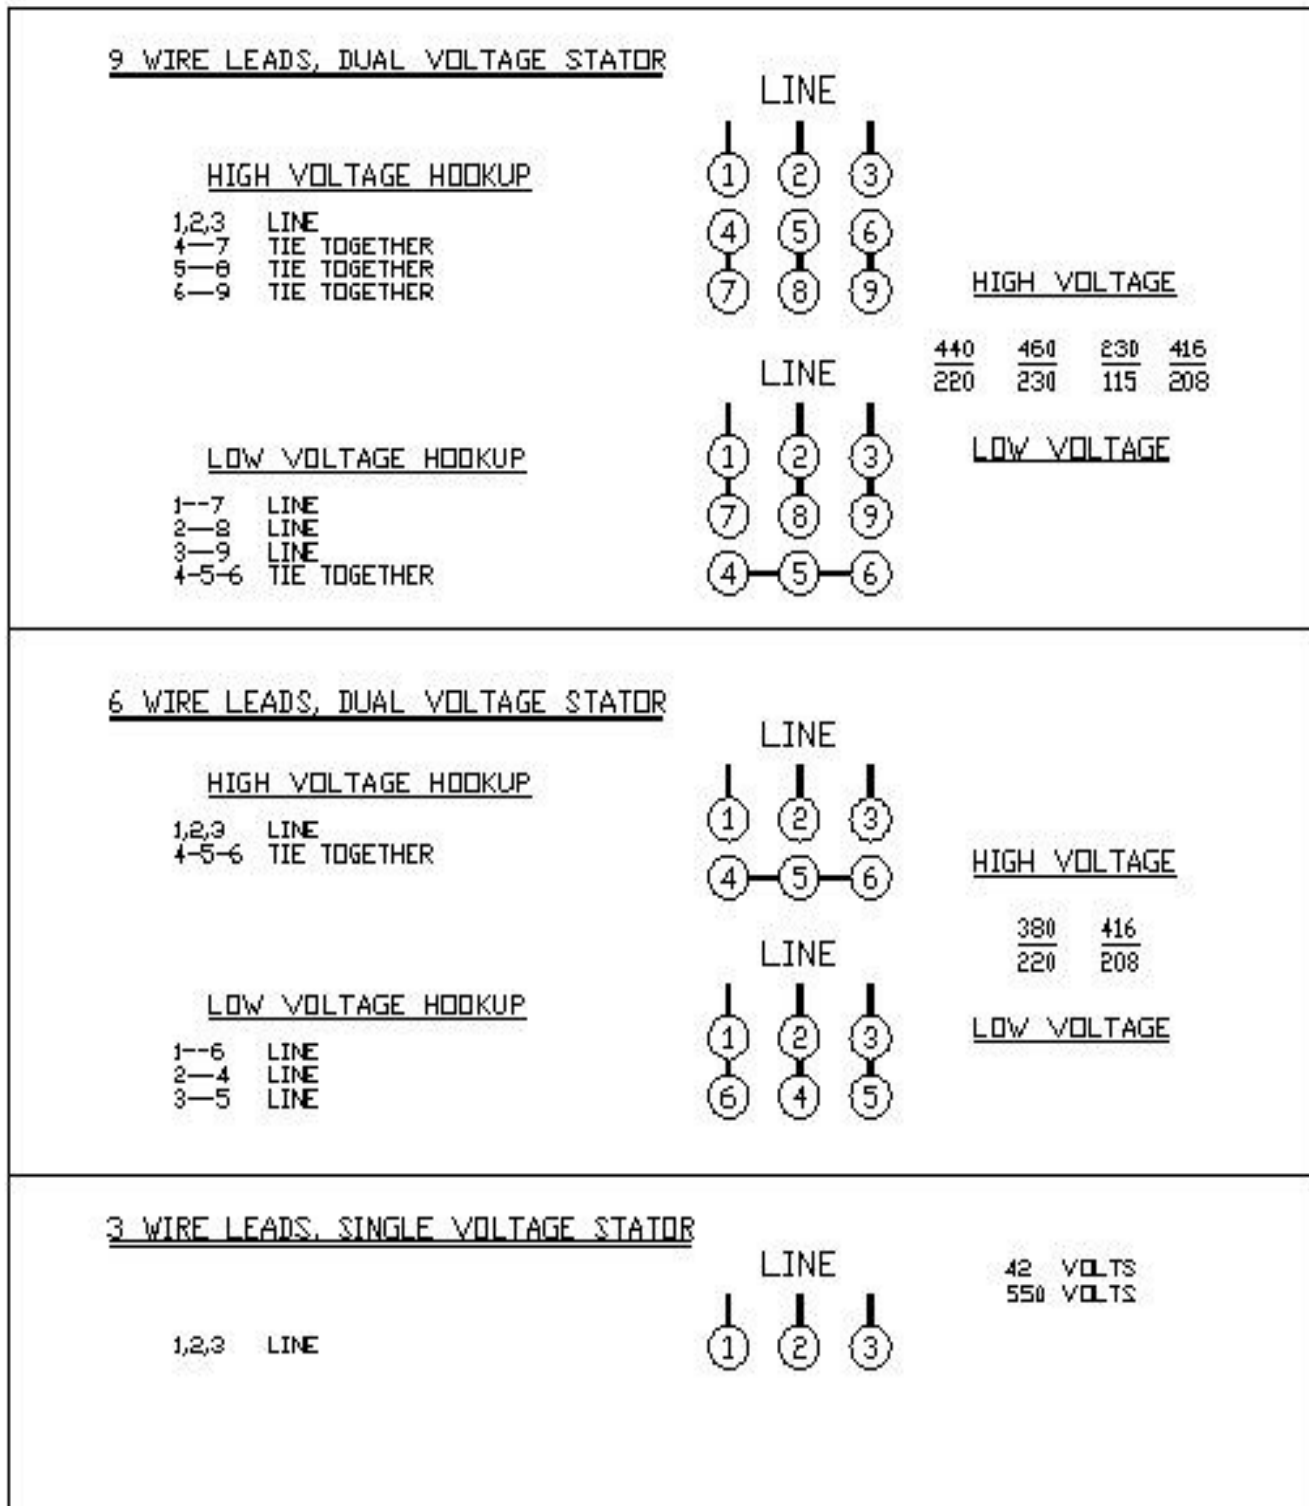


Figure 16 ELECTRIC MOTOR LEAD HOOKUP DIAGRAM

3 PHASE – DIFFERENT MOTOR AND CONTROL VOLTAGE, w/o ATD

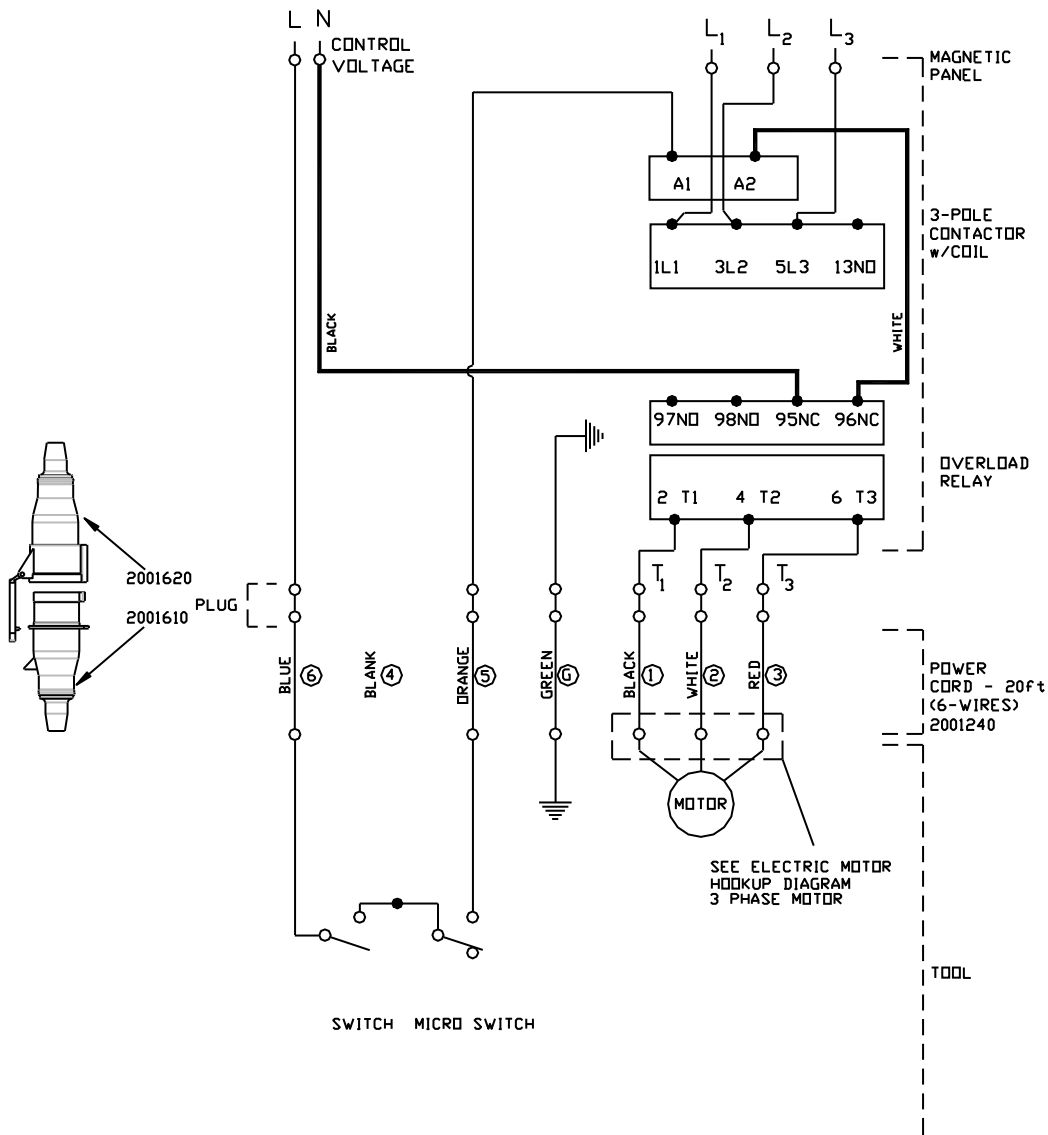


NOTES:

1. DO NOT ATTEMPT OR MAKE REPAIRS ON THE MACHINE WHILE POWER IS ON.
2. ALL ELECTRICAL WORK MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN.
3. THE ELECTRICAL DIAGRAM SHOWS THE MACHINE IN THE “OFF” POSITION.
4. THE GROUND WIRE (GREEN) OF THE POWER CABLE IS CONNECTED TO THE FRAME OF THE MACHINE.

To obtain the correct Kentmaster part number for 3-pole contactor and overload relay, please contact the Kentmaster representative.

Figure 17 WIRING DIAGRAM – different control and motor voltage, w/o ATD

3 PHASE – SAME MOTOR AND CONTROL VOLTAGE, w/o ATD

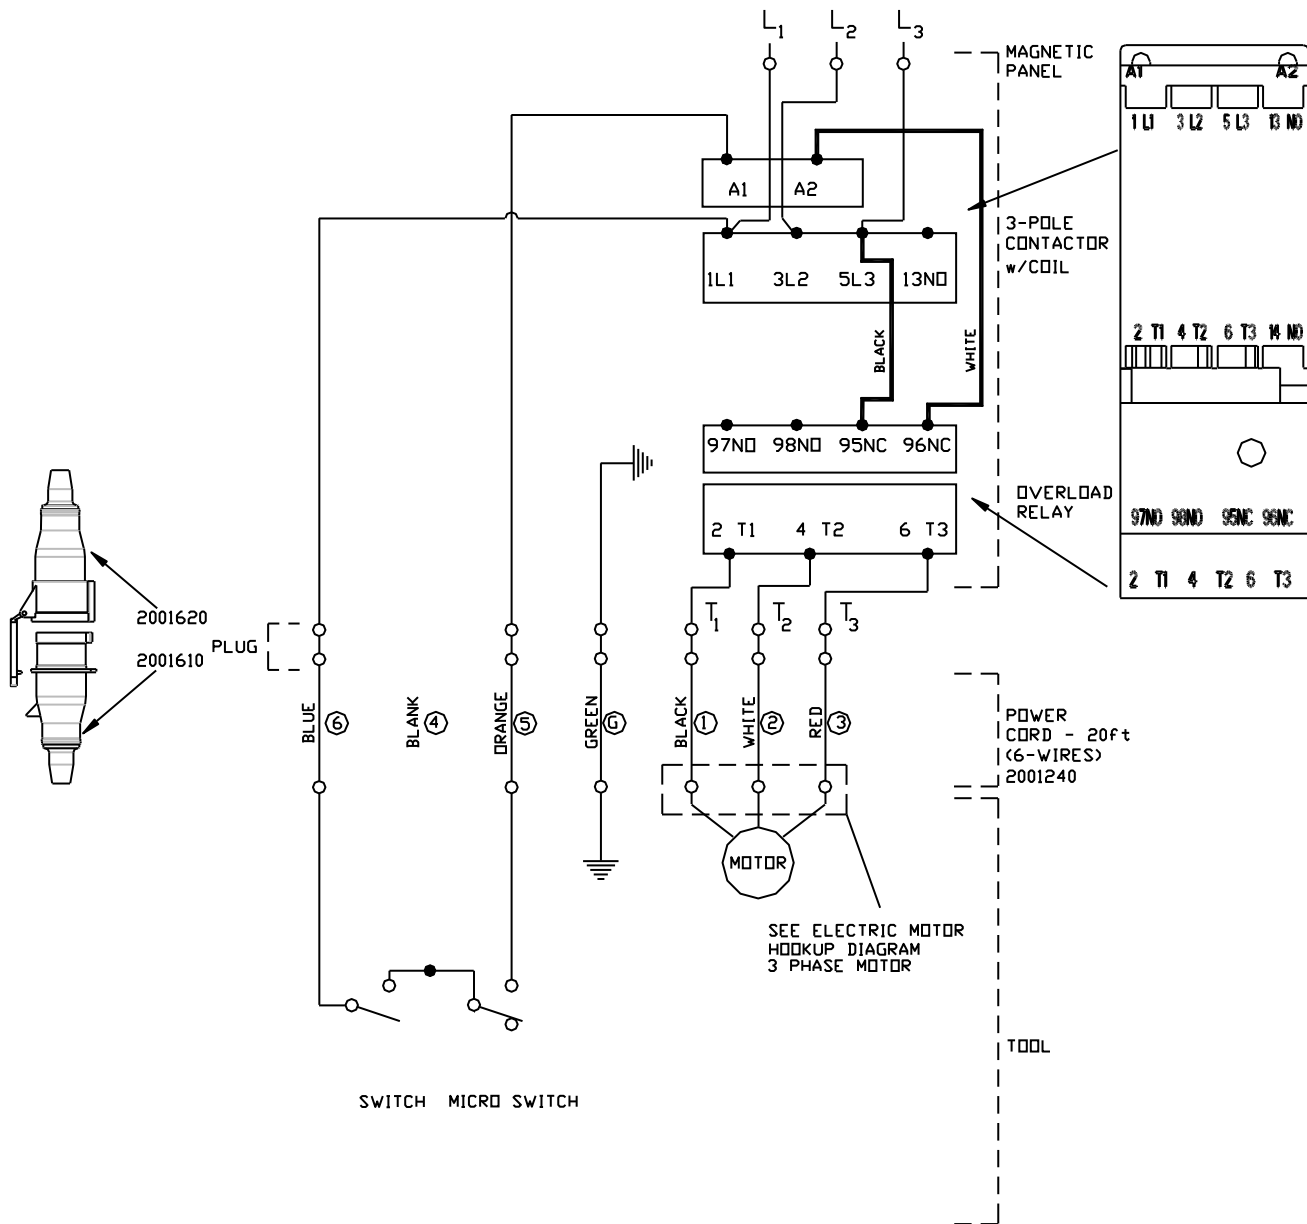


NOTES:

1. DO NOT ATTEMPT OR MAKE REPAIRS ON THE MACHINE WHILE POWER IS ON.
2. ALL ELECTRICAL WORK MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN.
3. THE ELECTRICAL DIAGRAM SHOWS THE MACHINE IN THE “OFF” POSITION.
4. THE GROUND WIRE (GREEN) OF THE POWER CABLE IS CONNECTED TO THE FRAME OF THE MACHINE.

To obtain the correct Kentmaster part number for 3-pole contactor and overload relay, please contact the Kentmaster representative.

Figure 18 WIRING DIAGRAM – same control and motor voltage, w/o ATD

3 PHASE – DIFFERENT MOTOR AND CONTROL VOLTAGE, with ATD

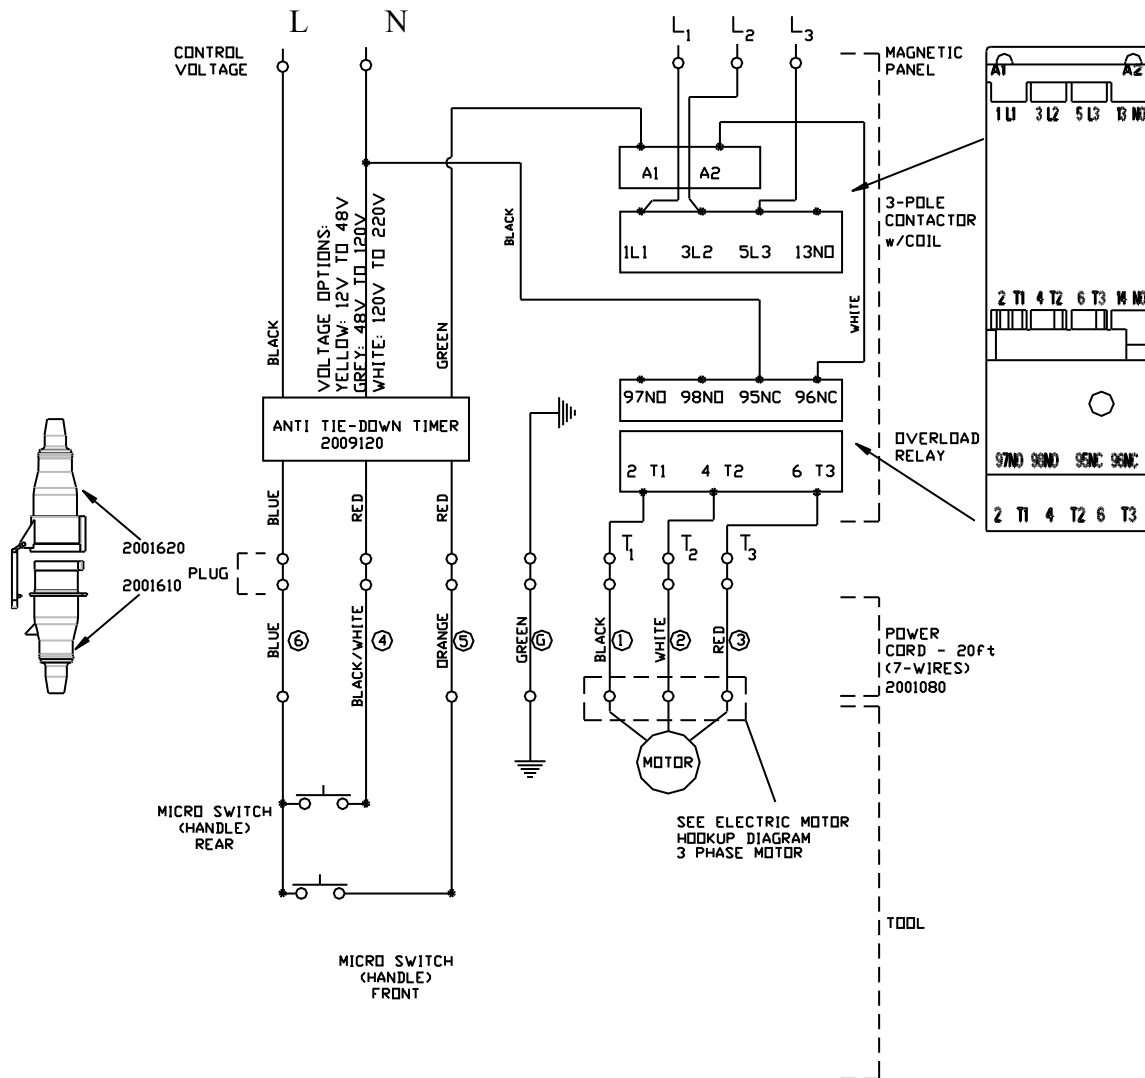


NOTES:

5. DO NOT ATTEMPT OR MAKE REPAIRS ON THE MACHINE WHILE POWER IS ON.
6. ALL ELECTRICAL WORK MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN.
7. THE ELECTRICAL DIAGRAM SHOWS THE MACHINE IN THE “OFF” POSITION.
8. THE GROUND WIRE (GREEN) OF THE POWER CABLE IS CONNECTED TO THE FRAME OF THE MACHINE.

To obtain the correct Kentmaster part number for 3-pole contactor and overload relay, please contact the Kentmaster representative.

Figure 19 WIRING DIAGRAM – different control and motor voltage, with ATD

3 PHASE – SAME MOTOR AND CONTROL VOLTAGE, with ATD

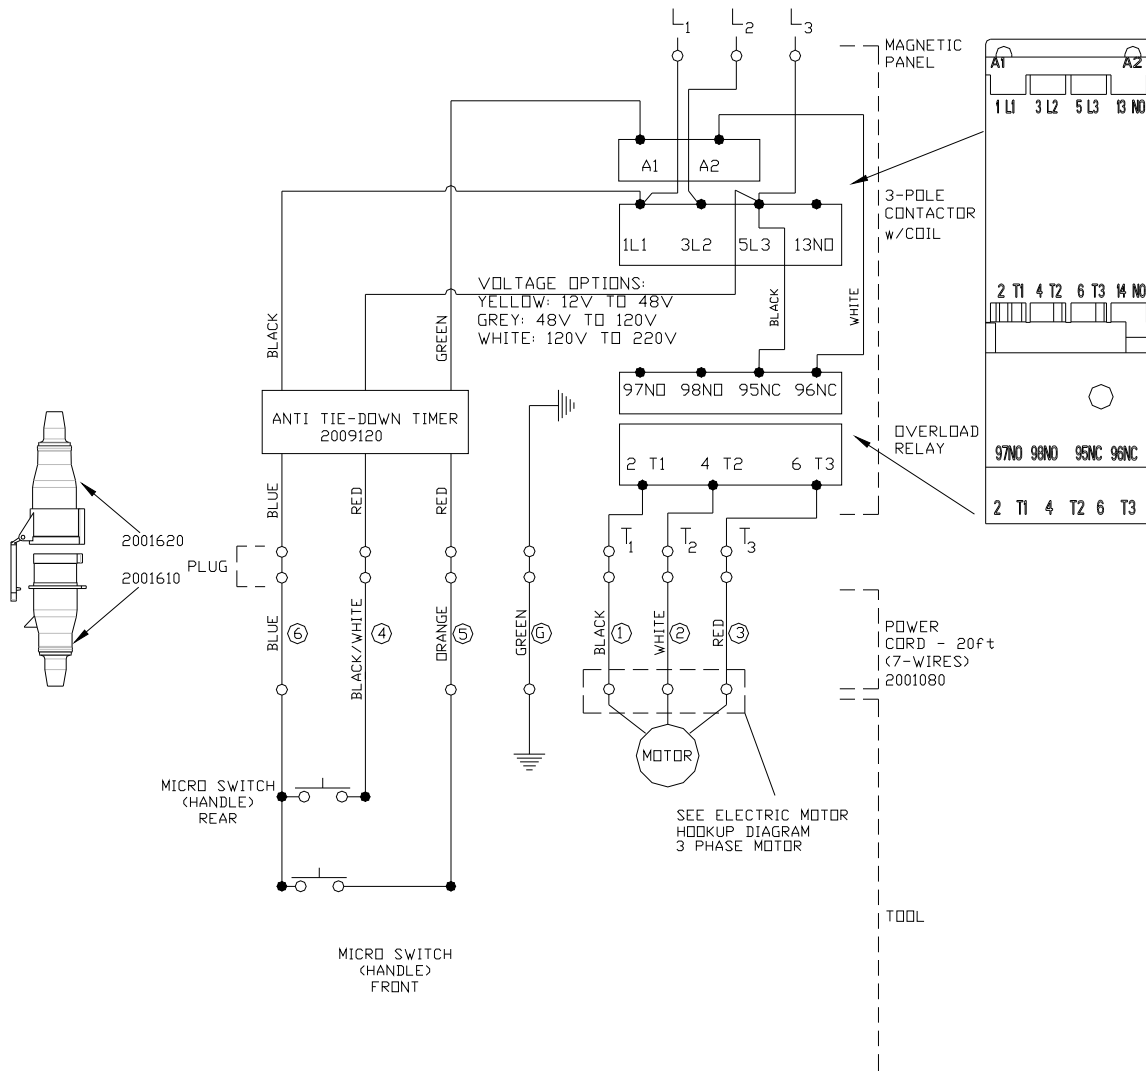

NOTES:


9. DO NOT ATTEMPT OR MAKE REPAIRS ON THE MACHINE WHILE POWER IS ON.
10. ALL ELECTRICAL WORK MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN.
11. THE ELECTRICAL DIAGRAM SHOWS THE MACHINE IN THE “OFF” POSITION.
12. THE GROUND WIRE (GREEN) OF THE POWER CABLE IS CONNECTED TO THE FRAME OF THE MACHINE.

To obtain the correct Kentmaster part number for 3-pole contactor and overload relay, please contact the Kentmaster representative.

Figure 20 WIRING DIAGRAM – same control and motor voltage, with ATD

HANDLES


REAR HANDLE

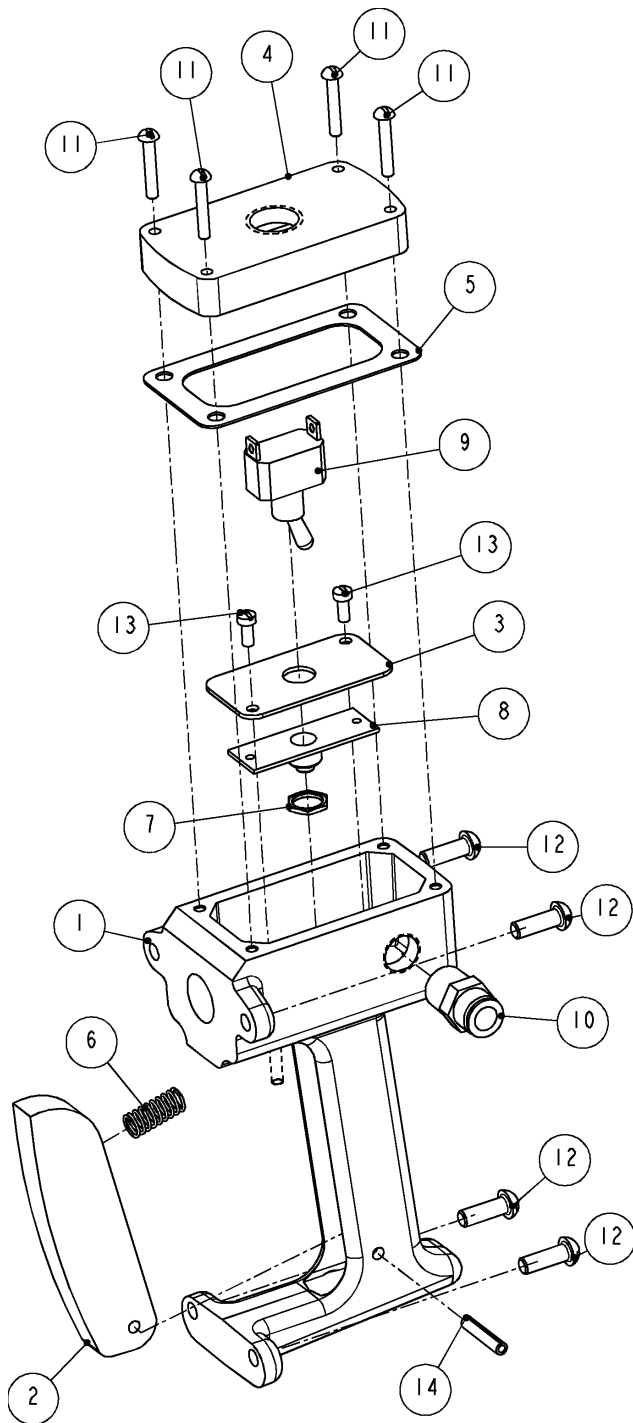

1001560: REAR HANDLE ASSEMBLY			
ITEM	PART #	DESCRIPTION	QTY
1	1000260	HANDLE	1
2	1000380	TRIGGER	1
3	1000450	PLATE - SWITCH MOUNT	1
4	1001570	COVER - SWITCH HANDLE	1
5	1002050	GASKET	1
6	1500110	SPRING	1
7	2000080	LOCKNUT	1
8	2000090	BOOT - MOISTURE SEAL	1
9	2000540	SWITCH	1
10	7036150	FITTING	1
11	8028080	SCREW	4
12	8031060	SCREW	4
13	8068030	SCREW	2
14	8613160	PIN	1

Figure 21 1001560: REAR HANDLE ASSEMBLY

FRONT HANDLE

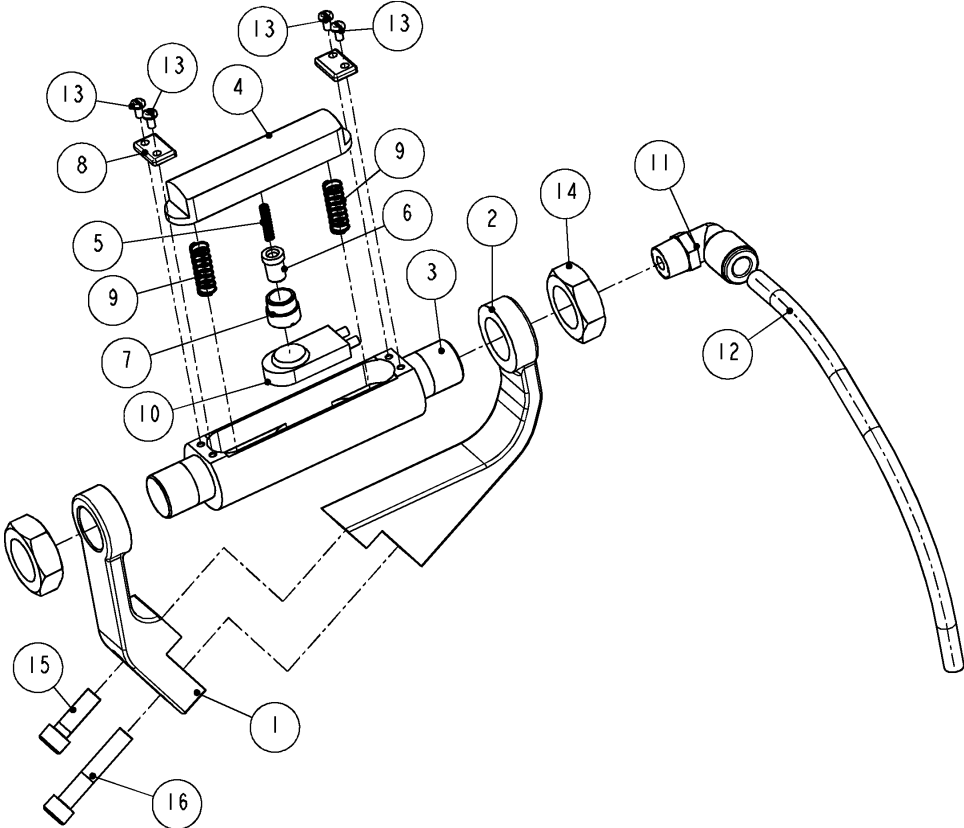


1003900: FRONT HANDLE			
ITEM	PART #	DESCRIPTION	QTY
1	1003840	BRACKET, RIGHT- HANDLE	1
2	1003850	BRACKET, LEFT - HANDLE	1
3	1302420	HANDLE	1
4	1302430	TRIGGER	1
5	1302440	SPRING	1
6	1302450	PLUNGER	1
7	1302460	HOLDER, PLUNGER	1
8	1302470	HOLDER	2
9	1701550	SPRING	2
10	2000690	SWITCH	1
11	7036450	ELBOW	1
12	7300750	TUBE	1
13	8086020	SCREW	4
14	8500580	NUT	2
15	9213080	SCREW	1
16	9213140	SCREW	1

Figure 22 1003900: FRONT HANDLE

NOTICE TO EMPLOYER AND PURCHASER OF TOOL

NOTICE TO SAFETY DIRECTOR

You have purchased a powerful tool that, if misused, can cause severe injury and harm to your employees. You must instruct your employees in the safe and proper use of this tool and to follow the safety procedures and instructions that have been supplied by the manufacturer of this tool. Please follow the following instructions.

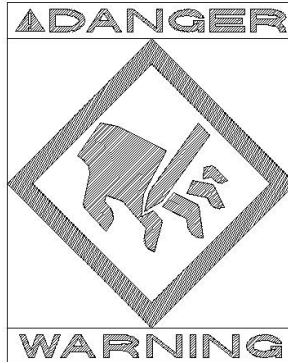

1. Instruct tool operators to test the tool each day before using it to be sure it does not malfunction. Remove and repair any tool that malfunctions.
2. Instruct tool operators to immediately stop using a tool that malfunctions or is defective.
3. Instruct personnel to immediately remove all tools that malfunction. Be sure to disconnect tool from power supply.
4. Instruct all personnel to stay clear of tool, and not to stand or walk in front of, or next to tool when in use.
5. Point out to all personnel the dangers related to the misuse of tool and the importance of following safety procedures and instructions.
6. Do not make, or allow others to make, alterations or modifications to this tool. Replace all lost or illegible labels.
7. Follow all safety, installation and maintenance instructions provided with this tool. Establish proper safety procedures in accordance with local and national requirements to prevent accidental energizing of tool that can cause injuries.
8. If this tool is sold or change in ownership takes place, you must provide the new owner all safety instructions, notices and maintenance instructions you were originally provided. You can obtain additional copies of the instructions from Kentmaster, free of charge upon request.
9. Give copies of instructions to:
(A) Tool Operators
(B) Maintenance Supervisor
(C) Clean-up Supervisor

INDEX

TOOL DATA.....	1
OPERATING AND SAFETY INSTRUCTIONS.....	2
INSTALLATION INSTRUCTIONS.....	3
OPERATING INSTRUCTIONS.....	3
MAINTENANCE.....	3
BLADE REMOVAL AND CLEANING.....	3
SERVICE.....	3
VIBRATION DATA.....	4
PARTS BOOK.....	5
SUPER SPEED – MAIN ASSEMBLY.....	5
MOTOR ASSEMBLY.....	7
NOSE GEAR ASSEMBLY.....	12
NOSE GEAR ASSEMBLY FOR 8”, 9” & 10” BLADE.....	12
NOSE GEAR ASSEMBLY FOR 11” & 12” BLADE.....	13
BLADE DEPTH GAUGE.....	14
DEPTH GAUGE FOR 9” & 10” BLADE.....	14
POWER SUPPLY.....	15
WIRING DIAGRAM.....	17
3 PHASE – DIFFERENT MOTOR AND CONTROL VOLTAGE, w/o ATD.....	18
3 PHASE – SAME MOTOR AND CONTROL VOLTAGE, w/o ATD.....	19
3 PHASE – DIFFERENT MOTOR AND CONTROL VOLTAGE, with ATD.....	20
3 PHASE – SAME MOTOR AND CONTROL VOLTAGE, with ATD.....	21
HANDLES.....	22
REAR HANDLE.....	22
FRONT HANDLE.....	23
NOTICE TO EMPLOYER AND PURCHASER OF TOOL.....	24
INDEX.....	25
Kentmaster Worldwide Location.....	26

Kentmaster Worldwide Location

Kentmaster Equipment (Aust) PTY.LTD.

Unit 2,24 Central Court
Browns Plains Qld. 4118
Australia

Telephone: (07) 3806-8400
Fax: (07) 3806-7933
Australia@Kentmaster.com

Kentmaster do Brasil, Ltda.
Av. Dr. Joao Teodoro No. 805
Bairro De Vila Rezende
13405-240 Piracicaba, SP,
Brazil

Telephone #1: (019) 3 413 3113
Telephone #2: (019)983-4973
Fax: (019) 3 413 3113
Brazil@Kentmaster.com

Kentmaster (IRL) LTD.
Benamore, Dublin Road.
Roscrea,
CO, Tipperary,
Ireland

Telephone: (353) 0505-23292
Fax: (353) 0505-23299
Ireland@Kentmaster.com

Kentmaster Equipment (NZ) LTD.
5 Cooper Street
Havelock North
New Zealand

Telephone #1: (64) 6 8777 857
Telephone #2: 0800 KENTMASTER
Fax: (64) 6 8777 858
NewZealand@Kentmaster.com

Kentmaster South Africa (PTY) LTD.
Johannesburg - S. Africa
Unit 54 Sunnyrock Park
Sunrock Close, Germiston
South Africa

Telephone: (27) 11-455-3748
Fax: (27) 11-455-3749
SouthAfrica@Kentmaster.com

Kentmaster (UK) LTD.
Unit 16 Avonbank Ind. Centre
West Town Rd, Avonmouth-Bristol,
BS11 9DE
England

Telephone: (44) 117-923-5035
Fax: (44)-117-932-9010
UK@Kentmaster.com

Kentmaster Mfg. Co., Inc.
1801 South Mountain Ave.
Monrovia, CA, 91016
USA

Telephone #1: (626) 359-8888
Telephone #2: (800) 421-1477
Fax: (626) 303-5151
info@Kentmaster.com

Kentmaster Omaha
4417 South 139th Street
Omaha, NE, 68137
USA

Telephone #1: (402) 896-3355
Telephone #2: (800) 367-3181
Fax: (402) 896-3311
Omaha@Kentmaster.com
