

OPERATOR'S MANUAL


INCLUDING: OPERATION, INSTRUCTION, INSTALLATION, MAINTENANCE AND PARTSBOOK

**IMPORTANT: READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR
SERVICING THIS TOOL.**

"COLT" BREAKING SAW

TOOL DATA

MODEL: COLT
ASSEMBLY NO: 100160
TYPE: ELECTRICAL OPERATED
NET WEIGHT: 16.5 LBS (7.5 KG)
VIBRATION: LESS THAN (<) 123 dB < 1.41m/s²
NOISE: LESS THAN 81dB

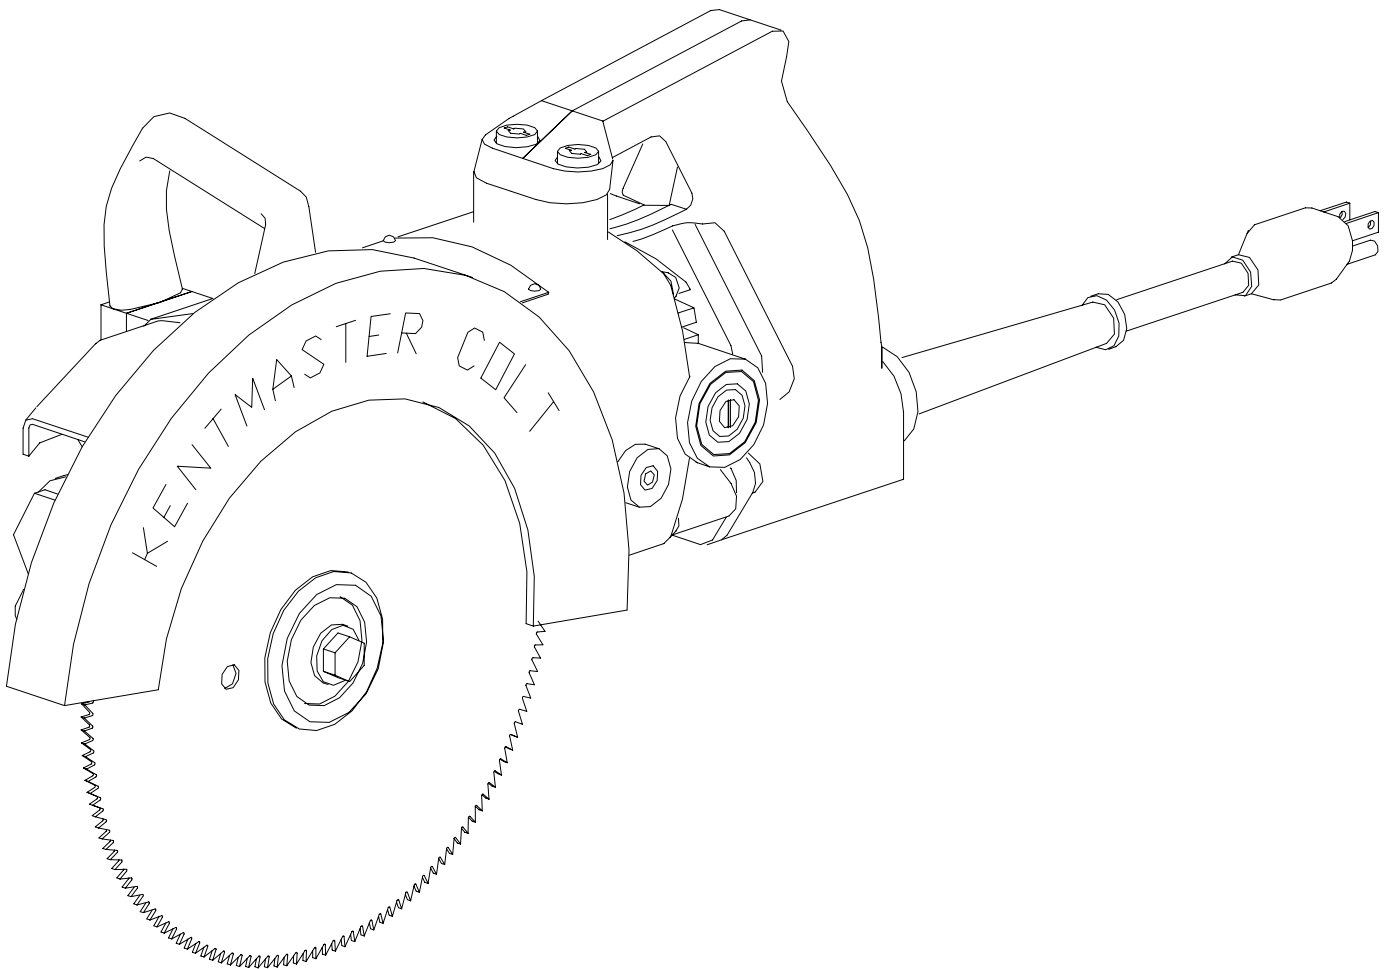



WARNING

= Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.



CAUTION

= Hazards or unsafe practices which could result in minor personal injury, product or property damage.



NOTICE

= Important installation, operation or maintenance information.

OPERATING AND SAFETY INSTRUCTIONS



WARNING

DO NOT OPERATE THIS TOOL UNTIL YOU HAVE READ AND UNDERSTOOD THE SAFETY INSTRUCTIONS AND OPERATING MANUALS.



WARNING

DO NOT OPERATE THIS TOOL UNTIL YOU HAVE RECEIVED TRAINING IN THE HANDLING, OPERATION AND USE OF THIS TOOL.



WARNING

STOP USING A MALFUNCTIONING OR DEFECTIVE TOOL IMMEDIATELY. REPORT ANY PROBLEMS OR DEFECTS TO YOUR SUPERVISOR FOR REMOVAL OF THE TOOL FROM SERVICE.



WARNING

DO NOT ATTEMPT TO REPAIR THE TOOL YOURSELF.



WARNING

DO NOT ALLOW UNAUTHORIZED PERSONS TO USE TOOL.



WARNING

REMOVE AND DISCONNECT POWER FROM THE TOOL WHEN TOOL IS LEFT UNATTENDED OR IS NOT IN USE.



WARNING

NEVER TIE DOWN, BYPASS, ALTER OR MODIFY THE ACTIVATING SWITCHES OR TRIGGERS OF THIS TOOL.



WARNING

NEVER MAKE ALTERATIONS OR MODIFICATIONS TO THIS TOOL.



WARNING

BE CONSTANTLY AWARE AND ALERT FOR UNSAFE CONDITIONS AND REPORT THEM IMMEDIATELY TO YOUR SUPERVISOR.



WARNING

NEVER PLACE YOUR HAND OR ANY PART OF YOUR BODY IN THE CUTTING PATH OF THE TOOL.



WARNING

NEVER ALLOW ANYONE ELSE TO PLACE THEIR HANDS OR ANY PART OF THEIR BODY IN THE CUTTING PATH OF THE TOOL.



WARNING

DO NOT ACTIVATE CONTROL SWITCHES OR TRIGGERS OF THIS TOOL UNLESS YOU INTEND TO TEST OR OPERATE THIS TOOL.



WARNING

DO NOT USE THIS TOOL FOR ANY PURPOSE OTHER THAN IT'S INTENDED PURPOSE.



CAUTION

WHEN OPERATING THIS TOOL WEAR THE PROTECTIVE GEAR AND SAFETY EQUIPMENT SUPPLIED TO YOU.



WARNING

THE NOISE EMISSION (SOUND PRESSURE LEVEL) AT THE WORKSTATION MAY EXCEED 80 dB (A). EAR AND SOUND PROTECTION GEAR IS REQUIRED.
VIBRATION: LESS THAN (<) 123 dB < 1.41m/s²
NOISE: LESS THAN 81dB

OPERATING INSTRUCTIONS

⚠ WARNING ONLY TRAINED PERSONNEL ARE TO OPERATE THIS TOOL.

THE "COLT" IS AN EXTREMELY POWERFUL, FAST CUTTING MEAT SAW AND FOR MAXIMUM PERFORMANCE AND OPERATOR CONVENIENCE WE SUGGEST THE FOLLOWING PROCEDURES BE FOLLOWED.

1. MAKE CERTAIN THE BLADE IS INSTALLED PROPERLY AND THE MACHINE IS CONNECTED TO A GROUNDED ELECTRICAL OUTLET.
2. ALWAYS OPERATE THE "COLT" USING BOTH HANDS AND PRESS THE MACHINE FIRMLY INTO WORK PIECE.
3. START THE MACHINE BEFORE ENTERING CUT. UPON STARTING, THE HIGH TORQUE WILL CAUSE THE MACHINE TO TWIST SLIGHTLY TO ONE SIDE.
4. COMPENSATE FOR THE TWIST AND FIRMLY BEGIN CUT, MOVING THE MACHINE BRISKLY ALONG THE DESIRED PATH.
5. OPERATE THE "COLT" AS PARALLEL TO THE WORK AS POSSIBLE TO UTILIZE THE MAXIMUM CUTTING DEPTH.
6. MAKE CERTAIN BLADE ROTATION HAS STOPPED BEFORE REMOVING THE MACHINE FROM THE WORK.
7. ALWAYS USE EXTREME SAFETY PRECAUTIONS WHEN USING POWER TOOLS.

MAINTENANCE

⚠ WARNING ONLY TRAINED AND QUALIFIED PERSONNEL ARE TO PERFORM MAINTENANCE AND SERVICE TO THIS TOOL.

1. CLEANING

OCCASIONALLY WIPE THE CORD TO PREVENT DETERIORATION FROM OIL AND GREASE. CLEAN THE VENT HOLES OUT WITH COMPRESSED AIR. IF COMPRESSED AIR IS NOT AVAILABLE, PULL THE POWER PLUG FROM THE OUTLET AND CLEAN VENT HOLES WITH A BRUSH. THIS WILL KEEP MOTOR COOL AND ADD MOTOR LIFE.

2. LUBRICATION

LUBRICANTS ARE SPECIALLY COMPOUNDED TO GIVE MAXIMUM PROTECTION UNDER A WIDE VARIETY OF OPERATING CONDITIONS AND TEMPERATURES. USE ONLY KENTMASTER LUBRICANTS. SEE PARTS LIST.

1. ALWAYS CHECK THE OIL LEVEL BEFORE USING THE SAW.
2. REMOVE OIL PLUG USING SAME WRENCH USED TO REMOVE SAW BLADE.
3. OIL LEVEL SHOULD NEVER BE BELOW BOTTOM THREADS IN HOUSING.
4. WHEN ADDING OIL, FILL UNTIL OIL STARTS TO RUN OUT OF OIL HOLE AT ARROW HOUSING.
5. USE 80 OR 90 WEIGHT OIL.

NOTE: IF OIL IS EXTRA DIRTY OR THICK, REPLACE THE PLUG AND RUN THE SAW FOR ONE MINUTE TO WARM UP THE OIL. REMOVE THE OIL PLUG AND TURN SAW UPSIDE DOWN TO REMOVE ALL OIL. FILL HOUSING WITH KEROSENE. REPLACE PLUG AND RUN FOR ONE MINUTE TO FLUSH OUT THE GEAR HOUSING. DRAIN OUT THE KEROSENE AND ADD FRESH LUBRICANT. WITH A NEW SAW, CHANGE THE OIL AFTER THE FIRST HOURS OF USE.

3. MOTOR BRUSHES

CHECK MOTOR BRUSHES OFTEN AND KEEP THEM FREE FROM DUST AND DIRT. BRUSHES SHOULD BE REPLACED WHEN THEY HAVE WORN DOWN TO 3/16" IN LENGTH. THE BRUSHES SHOULD ALWAYS SLIDE FREELY IN THE BRUSH HOLDERS WITHOUT STICKING. TO CHECK BRUSHES:

1. DISCONNECT CORD FROM OUTLET.
2. UNSCREW ONE OF THE BRUSH CAPS ON THE MOTOR HOUSING.
3. LIFT OUT THE BRUSH: NOTE WHICH WAY IT FACES, SO THAT THE BRUSH CAN BE RETURNED TO ITS ORIGINAL POSITION.
4. CLEAN THE BRUSH HOLDER OPENING WITH COMPRESSED AIR OR CLEAN CLOTH.
5. REPLACE THE BRUSH AND CAP.
6. UNSCREW THE OTHER BRUSH CAP, AND REPEAT THE ABOVE OPERATION.

CHANGING BLADES



WARNING

ALWAYS DISCONNECT POWER SUPPLY FROM TOOL BEFORE INSTALLING OR REMOVING BLADE FROM TOOL.



WARNING

ALWAYS WEAR WIRE MESH GLOVES WHEN INSTALLING OR REMOVING BLADE FROM TOOL.


1. PRESS LOCK PIN TO LOCK SAW SHAFT
2. TO LOOSEN, TURN SAW STUD CLOCKWISE. STUD HAS LEFT HAND THREAD. (FOR STANDARD BLADE DIRECTION)
3. MOUNT BLADE WITH TEETH POINTING IN DIRECTION OF ROTATION. TIGHTEN SAW STUD AS MUCH AS POSSIBLE WITH FINGERS, THEN APPLY WRENCH AND TIGHTEN STUD TO POINT OF SLIGHT RESISTANCE.

IF THE BLADE SLIPS TOO MUCH DURING NORMAL USE, TIGHTEN STUD A BIT MORE. MAKE THESE ADJUSTMENTS EACH TIME YOU MOUNT A BLADE ON YOU SAW.

WHEN YOU ADJUST THE BLADE STUD PROPERLY, THE CLUTCH PERMITS THE SHAFT TO MAKE AN EXTRA ¼ TO ½ TURN IF THE BLADE MEETS EXCESSIVE RESISTANCE AND STOP SUDDENLY. THIS PROTECTS SAW COMPONENTS FROM "SHOCK OVERLOAD" AND LESSENS "KICKBACK" BY LETTING MOTOR, GEARS AND SHAFT STOP LESS ABRUPTLY IF BLADE SHOULD BIND OR JAM TO A STOP.

REPAIR PARTS AND SERVICE


1. KEEP GOOD RECORDS OF ALL SERVICE ACTIVITY AND INCLUDE TOOL IN PREVENTIVE MAINTENANCE PROGRAM.
2. USE ONLY GENUINE KENTMASTER REPLACEMENT PARTS TO ASSURE PROPER PERFORMANCE OF TOOL.
3. CONTACT THE KENTMASTER SUPPLIER NEAREST YOU FOR PARTS AND CUSTOMER SERVICE INFORMATION.
4. REPAIRS AND OVERHAUL SERVICE IS AVAILABLE FOR ALL MODEL KENTMASTER MACHINES. PLEASE RETURN YOUR MACHINE TO KENTMASTER FREIGHT PREPAID ALONG WITH YOUR PURCHASE ORDER REQUESTING AUTHORIZED FACTORY REPAIRS. REPAIR ESTIMATES ARE PROVIDED UPON REQUEST.

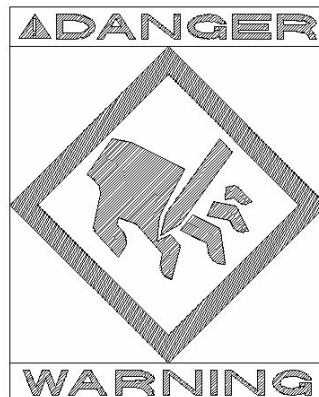

PARTS BOOK COLT

KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE., MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA

☎ TELEPHONE: (626) 359-8888 FAX: (626) 303-5151

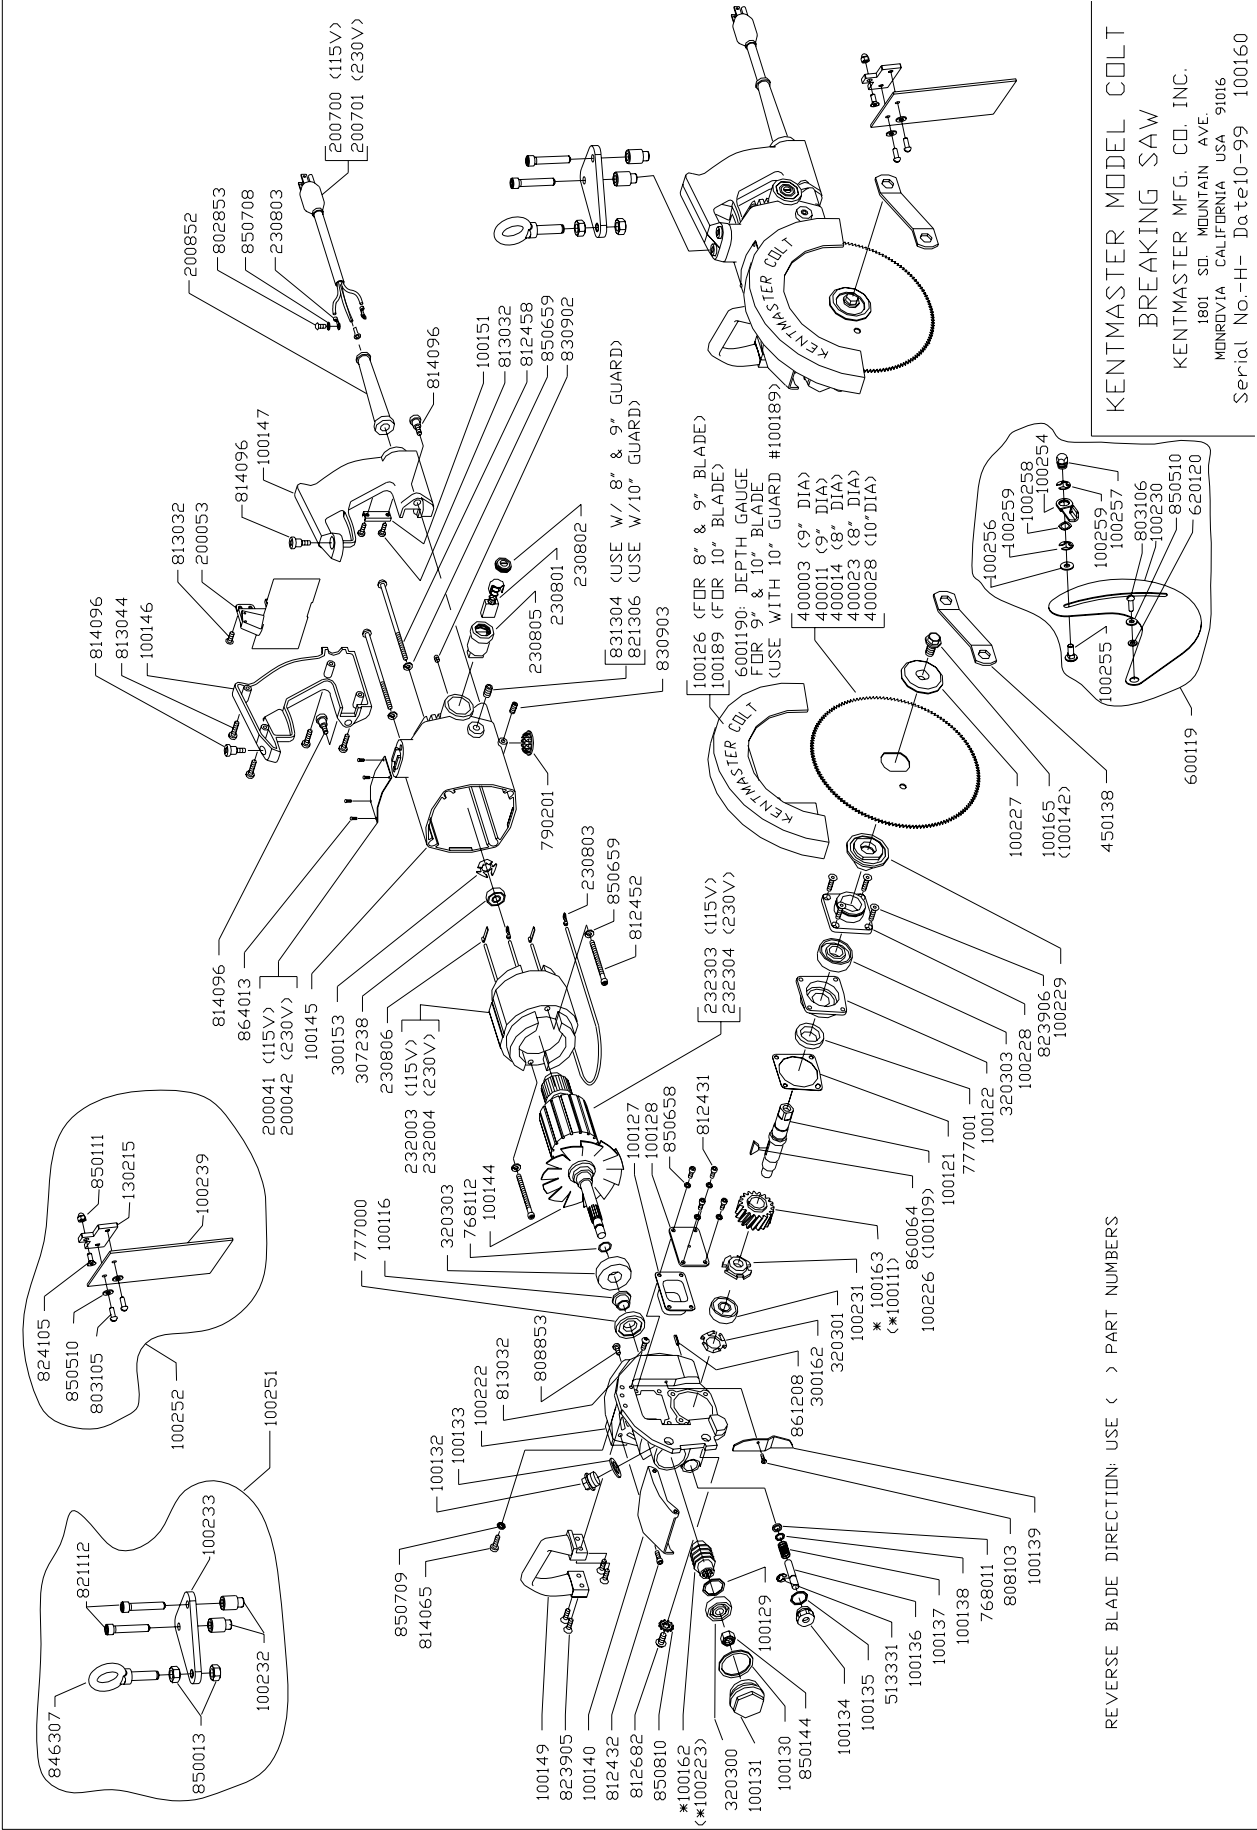

REVERSE BLADE DIRECTION: USE () PART NUMBERS

KENTMASTER MODEL COLT
 BREAKING SAW
 KENTMASTER MFG. CO. INC.
 1801 SO. MOUNTAIN AVE.
 MONROVIA CALIFORNIA USA 91016
 Serial No.-H- Date 10-99 100160

Figure 1 MODEL "COLT" – MAIN ASSEMBLY

KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE., MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA

☎ TELEPHONE: (626) 359-8888 FAX: (626) 303-5151

1001600: "COLT" BREAKING SAW							
Item	Description	Qty	Item	Description	Qty	Item	
1001160	BUSHING, OIL SEAL	1	1002310	LOCK DISK	1	7903000**	
1001210	GASKET	1	2000410	NAME PLATE, MOTOR RATING 115V	1	7903010**	
1001220	BEARING, PLATE	1	2000420	NAME PLATE, MOTOR RATING 230V	1	7903020**	
1001260	BLADE GUARD (FOR 8" AND 9" ONLY)	1	2000530	SWITCH	1	8028530	
1001270	EXPANSION CHAMBER	1	2007000	CORD AND PLUG, 115 VOLT	1	8081030	
1001280	COVER PLATE	1	2007010	CORD AND PLUG, 230 VOLT	1	8088530	
1001290	SPACER	1	2008520	STRAIN RELIEF	1	8124310	
1001300	WASHER	1	2308010	BRUSH AND SPRING	2	8124320	
1001310	CAP, GEAR HOUSING	1	2308020	BRUSH CAP	2	8124520	
1001320	OIL PLUG	1	2308030	WIRE TERMINAL	5	8124580	
1001330	WASHER, OIL PLUG	1	2308050	BRUSH HOLDER	2	8126820	
1001340	LOCK PIN, BUSHING	1	2308060	WIRE TERMINAL	1	8130320	
1001350	WASHER, LOCK PIN BUSHING	1	2320030	FIELD, 115 VOLT	1	8130440	
1001360	LOCK PIN	1	2320040	FIELD, 230 VOLT, SPADE BRUSH LEADS	1	8140650	
1001370	SPRING	1	2323030	ARMATURE, 115 VOLT	1	8140960	
1001380	WASHER, O-RING BACK-UP	1	2323040	ARMATURE, 230V "COLT"	1	8213060	
1001390	PLATE COVER, GEAR HOUSING	1	3001530	LOAD SPRING, BEARING	1	8239050	
1001400	HOOD, GEAR HOUSING	1	3001620	LOAD SPRING, BEARING	1	8239060	
1001440	FAN	1	3072380	BEARING	1	8309020	
1001450	MOTOR HOUSING	1	3203000	BEARING	1	8313040	
1001460	HANDLE COVER, RIGHT HAND	1	3203010	BEARING	1	8501440	
1001470	HANDLE COVER, LEFT HAND	1	3203030	BEARING	2	8506580	
1001490	TOP HANDLE	1	4000030	SAW BLADE, 9" DIAMETER, 240 TEETH	1	8506590	
1001510	CORD CLAMP	1	4000110	SAW BLADE, 9" DIAMETER THIN RIM, 240 TEETH	1	8507080	
1001620*	WORM	1	4000140	SAW BLADE, 8" DIAMETER, 100 TEETH	1	8507090	
1001630*	WORM WHEEL	1	4000230	SAW BLADE, THIN RIM, 8" DIAMETER, 150 TEETH	1	8508100	
1001650	SAW BLADE STUD	1	4000280	SAW BLADE, 10" DIAMETER STANDARD 120 TEETH	1	8600640	
1001890	10" BLADE GUARD	1	4501380	WRENCH, SAW BLADE	1	8612080	
1002220	GEAR HOUSING	1	5133310	EXTERNAL SNAP RING	1	8640130	
1002260	SHAFT	1	7680110	O-RING	1	FOR REVERSE DIRECTION USE:	
1002270	WASHER	1	7681120	O-RING	1	1001090	SHAFT, SAW
1002280	GUARD, PLATE	1	7770000	OIL SEAL	1	1001110*	WHEEL, WORM
1002290	FLANGE, BUSHING	1	7770010	OIL SEAL	1	1002230*	WORM
1002300	GAUGE, 10"	1	7902010	PLUG BUTTON	1	1001420	STUD, SAW BLADE
*	PARTS ARE MATCHED SET		**	AVAILABLE UPON REQUEST			

Figure 2 BOM FOR MODEL "COLT"

KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE., MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA

☎ TELEPHONE: (626) 359-8888 FAX: (626) 303-5151

“COLT” OPTIONS


6001190: DEPTH GAUGE FOR 9" & 10" BLADE		
(USE WITH 10" GUARD #100189)		
Item	Description	Quantity
1002300	DEPTH GAUGE	1
1002540	LEVER	1
1002550	BOLT	1
1002560	WASHER	1
1002570	NUT	1
1002580	SPRING LOAD	1
1002590	LEVER RETAINER	2
6201200	WASHER	1
8031060	SCREW	1
8505100	WASHER	1

1002520: SPLASH GUARD SET		
Item	Description	Quantity
1002390	SPLASH GUARD	1
1302150	MOUNTING PLATE	1
8031050	SCREW	2
8241050	SCREW	1
8501110	NUT	1
8505100	WASHER	2

1002510: HANGER SET		
Item	Description	Quantity
1002320	STANDOFF	2
1002330	HANGER	1
8211120	SCREW	2
8463070	EYE BOLT	1
8500130	NUT	2

[ENGLISH]

GENERAL INFORMATION

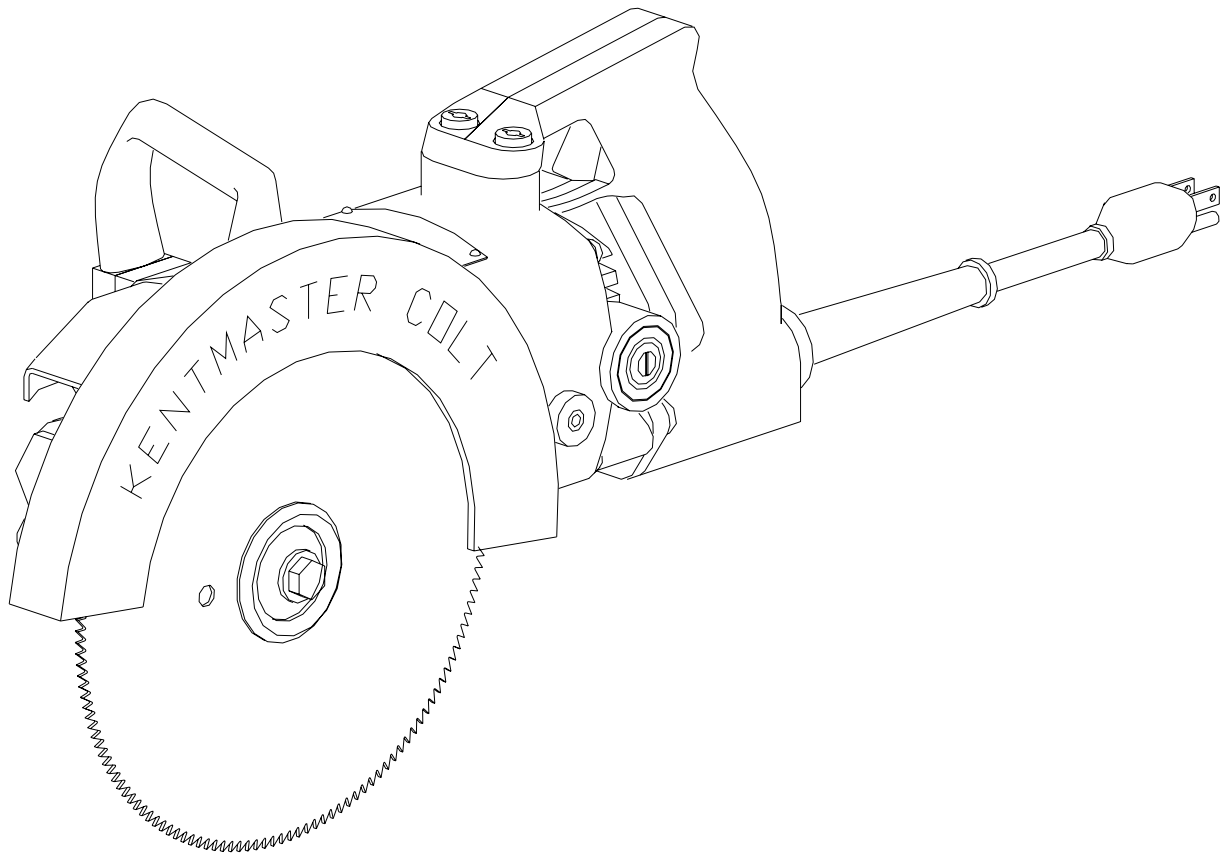

MODEL

“COLT” BREAKING SAW

SERVICE CENTERS

KENTMASTER LTD. (U.K)
16 AVONBANK INDUSTRIAL CENTRE
WEST TOWN ROAD
AVONMOUTH - BRISTOL BS11 9DE
UNITED KINGDOM


☎ TELEPHONE: ++ 44- (0) 117- 9235035
FAX: ++ 44- (0) 117- 9829010

KENTMASTER MFG. CO., INC.
1801 SOUTH MOUNTAIN AVE.
MONROVIA, CALIFORNIA 91016
UNITED STATES OF AMERICA

☎ TELEPHONE: (626) 359-8888
FAX: (626) 303-5151

NOTICE TO EMPLOYER AND PURCHASER OF TOOL
NOTICE TO SAFETY DIRECTOR

You have purchased a powerful tool that, if misused, can cause severe injury and harm to your employees. You must instruct your employees in the safe and proper use of this tool and to follow the safety procedures and instructions that have been supplied by the manufacturer of this tool. Please follow the following instructions.

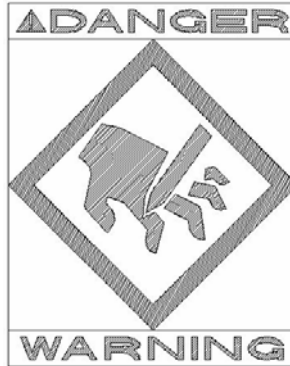

1. Instruct tool operators to test the tool each day before using it to be sure it does not malfunction. Remove and repair any tool that malfunctions.
2. Instruct tool operators to immediately stop using a tool that malfunctions or is defective.
3. Instruct personnel to immediately remove all tools that malfunction. Be sure to disconnect tool from power supply.
4. Instruct all personnel to stay clear of tool, and not to stand or walk in front of, or next to tool when in use.
5. Point out to all personnel the dangers related to the misuse of tool and the importance of following safety procedures and instructions.
6. Do not make, or allow others to make, alterations or modifications to this tool. Replace all lost or illegible labels.
7. Follow all safety, installation and maintenance instructions provided with this tool. Establish proper safety procedures in accordance with local and national requirements to prevent accidental energizing of tool that can cause injuries.
8. If this tool is sold or change in ownership takes place, you must provide the new owner all safety instructions, notices and maintenance instructions you were originally provided. You can obtain additional copies of the instructions from Kentmaster, free of charge upon request.
9. Give copies of instructions to: **(A) Tool Operators**
(B) Maintenance Supervisor
(C) Clean-up Supervisor

GENERAL INFORMATION

 


COVERING: SAFETY PRECAUTIONS AND PLACING INTO SERVICE



“COLT” BREAKING SAW

READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS TOOL

IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PLACE THIS INFORMATION INTO THE HANDS OF THE OPERATOR.

PLACING INTO SERVICE

-  **WARNING** = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.
-  **CAUTION** = Hazards or unsafe practices which could result in minor personal injury, product or property damage.
-  **NOTICE** = Important installation, operation or maintenance information.

-  **WARNING** Installation, adjustment repair and maintenance of this tool must be made by trained and qualified personnel.
-  **WARNING** Always disconnect power supply from tool before:
- (A) Installing or removing blade from tool.
 - (B) Making repairs or adjustments to the tool.
 - (C) performing maintenance or cleanup work.

DECLARATION OF CONFORMITY

DECLARATION OF CONFORMITY

DECLARATION DE CONFORMITE -DECLARACION DE CONFORMIDAD- ERKLARUNG BEZUGLICH EINHALTUNG DER VORSCHRIFTEN
DICHIARAZIONE DI CONFORMITA . CONFORMITEITSVERKLARING

MANUFACTURED BY:

FABRIQUE PAR:
FABRICADA POR:
HERGESTELLTVON:
FABBRICATO DA:
VERVAARDIGD DOOR:

KENTMASTER MFG CO., INC.

1801 SOUTH MOUNTAIN AVE.
MONROVIA, CALIFORNIA 91016
UNITED STATES OF AMERICA
TELEPHONE (626) 359-8888 FAX (626) 303-5151

TYPE / SERIES: BREAKING SAW

TYPE / SERIE:
TIPO / SERIE:
TYP / SERIE:
TIPO / SERIE:
TYPE / SERIE:

MODEL: COLT

MODELE:
MODELO:
MODELL:
MODELLO:
MODEL:

SERIAL NO. RANGE: XXXXX

N SERIE: • GAMA DE No. DE SERIE: • SERIEN-NR.-BEREICH: • NUMERI DI SERIE: • SERIENUMMERS:

This product complies with the following European Community Directives:

Ce produit est conforme aux directives de la Communauté européenne suivantes:
Este producto cumple con las siguientes Directrices de la Comunidad Europea:
Dieses Produkt erfüllt die folgenden Vorschriften der Europäischen Gemeinschaft:
Questo prodotto è conforme alle seguenti direttive CEE:
Dit produkt voldoet aan de volgende EG-richtlijnen:

89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC

The following Standards were used to verify compliance with the Directives:

Les normes suivantes ont été utilisées pour vérifier la conformité avec les Directives:
Las siguientes Normas se usaron para verificar el cumplimiento de las Directrices:
Folgende Normen wurden angewandt, um Erfüllung der Vorschriften zu bestätigen:
Per verificare la conformità del prodotto alle direttive sono stati usati i seguenti standard:
De volgende normen zijn gebruikt om naleving van de richtlijnen te bevestigen:

EN 292

Approved by: _____

RALPH KARUBIAN MONROVIA, CA. U.S.A

(Engineering Manager) (Directeur technique) (gerente de ingenieria) (verantwortlicher Konstruktionsleiter) (Responsabile tecnico) (ondersteunend technisch manager)

Date: AUG - 1 - 1995

Kentmaster Worldwide Location

Kentmaster Equipment (Aust) PTY.LTD.
Unit 2,24 Central Court
Browns Plains Qld. 4118
Australia

Telephone: (07) 3806-8400
Fax: (07) 3806-7933
Australia@Kentmaster.com

Kentmaster do Brasil, Ltda.
Av. Dr. Joao Teodoro No. 805
Bairro De Vila Rezende
13405-240 Piracicaba, SP,
Brazil

Telephone #1: (019) 3 413 3113
Telephone #2: (019)983-4973
Fax: (019) 3 413 3113
Brazil@Kentmaster.com

Kentmaster (IRL) LTD.
Benamore, Dublin Road.
Roscrea,
CO, Tipperary,
Ireland

Telephone: (353) 0505-23292
Fax: (353) 0505-23299
Ireland@Kentmaster.com

Kentmaster Equipment (NZ) LTD.
5 Cooper Street
Havelock North
New Zealand

Telephone #1: (64) 6 8777 857
Telephone #2: 0800 KENTMASTER
Fax: (64) 6 8777 858
NewZealand@Kentmaster.com

Kentmaster South Africa (PTY) LTD.
Johannesburg - S. Africa
Unit 54 Sunnyrock Park
Sunrock Close, Germiston
South Africa

Telephone: (27) 11-455-3748
Fax: (27) 11-455-3749
SouthAfrica@Kentmaster.com

Kentmaster (UK) LTD.
Unit 16 Avonbank Ind. Centre
West Town Rd, Avonmouth-Bristol,
BS11 9DE
England

Telephone: (44) 117-923-5035
Fax: (44)-117-932-9010
UK@Kentmaster.com

Kentmaster Mfg. Co., Inc.
1801 South Mountain Ave.
Monrovia, CA, 91016
USA

Telephone #1: (626) 359-8888
Telephone #2: (800) 421-1477
Fax: (626) 303-5151
info@Kentmaster.com

Kentmaster Omaha
4417 South 139th Street
Omaha, NE, 68137
USA

Telephone #1: (402) 896-3355
Telephone #2: (800) 367-3181
Fax: (402) 896-3311
Omaha@Kentmaster.com

INDEX

<i>OPERATING AND SAFETY INSTRUCTIONS</i>	2
<i>OPERATING INSTRUCTIONS</i>	3
<i>MAINTENANCE</i>	3
<i>CHANGING BLADES</i>	4
<i>REPAIR PARTS AND SERVICE</i>	4
<i>PARTS BOOK</i>	4
<i>COLT</i>	4
“ <i>COLT</i> ” <i>OPTIONS</i>	7
<i>GENERAL INFORMATION</i>	10
<i>DECLARATION OF CONFORMITY</i>	11
<i>Kentmaster Worldwide Location</i>	12
<i>INDEX</i>	13
<i>FIGURES - INDEX</i>	13

FIGURES - INDEX

Figure 1 MODEL “COLT” – MAIN ASSEMBLY	5
Figure 2 BOM FOR MODEL “COLT”	6